




Setting Up Your Response Pad

RCXR-01

Response Pad


Press MENU button

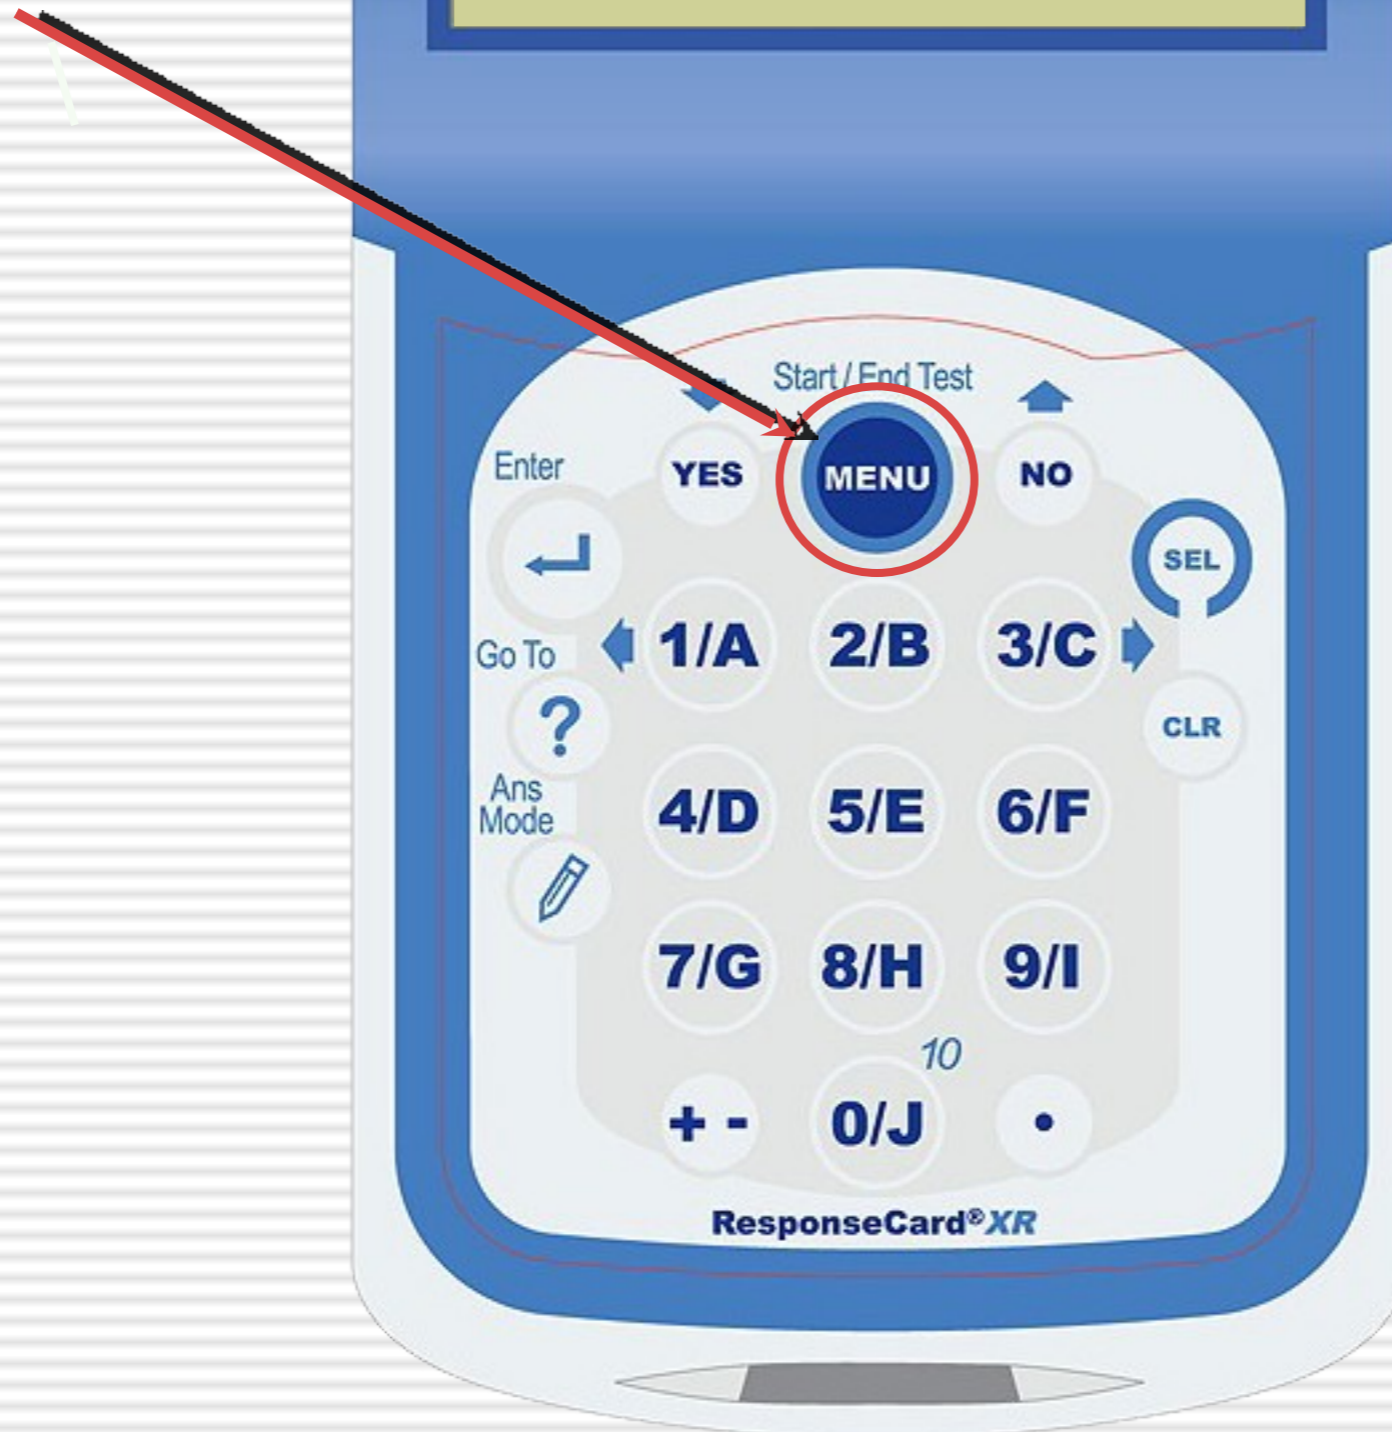

Default Menu Screen

Current Channel
(each classroom may have a different channel)


Battery Status
(two AAA batteries in back)

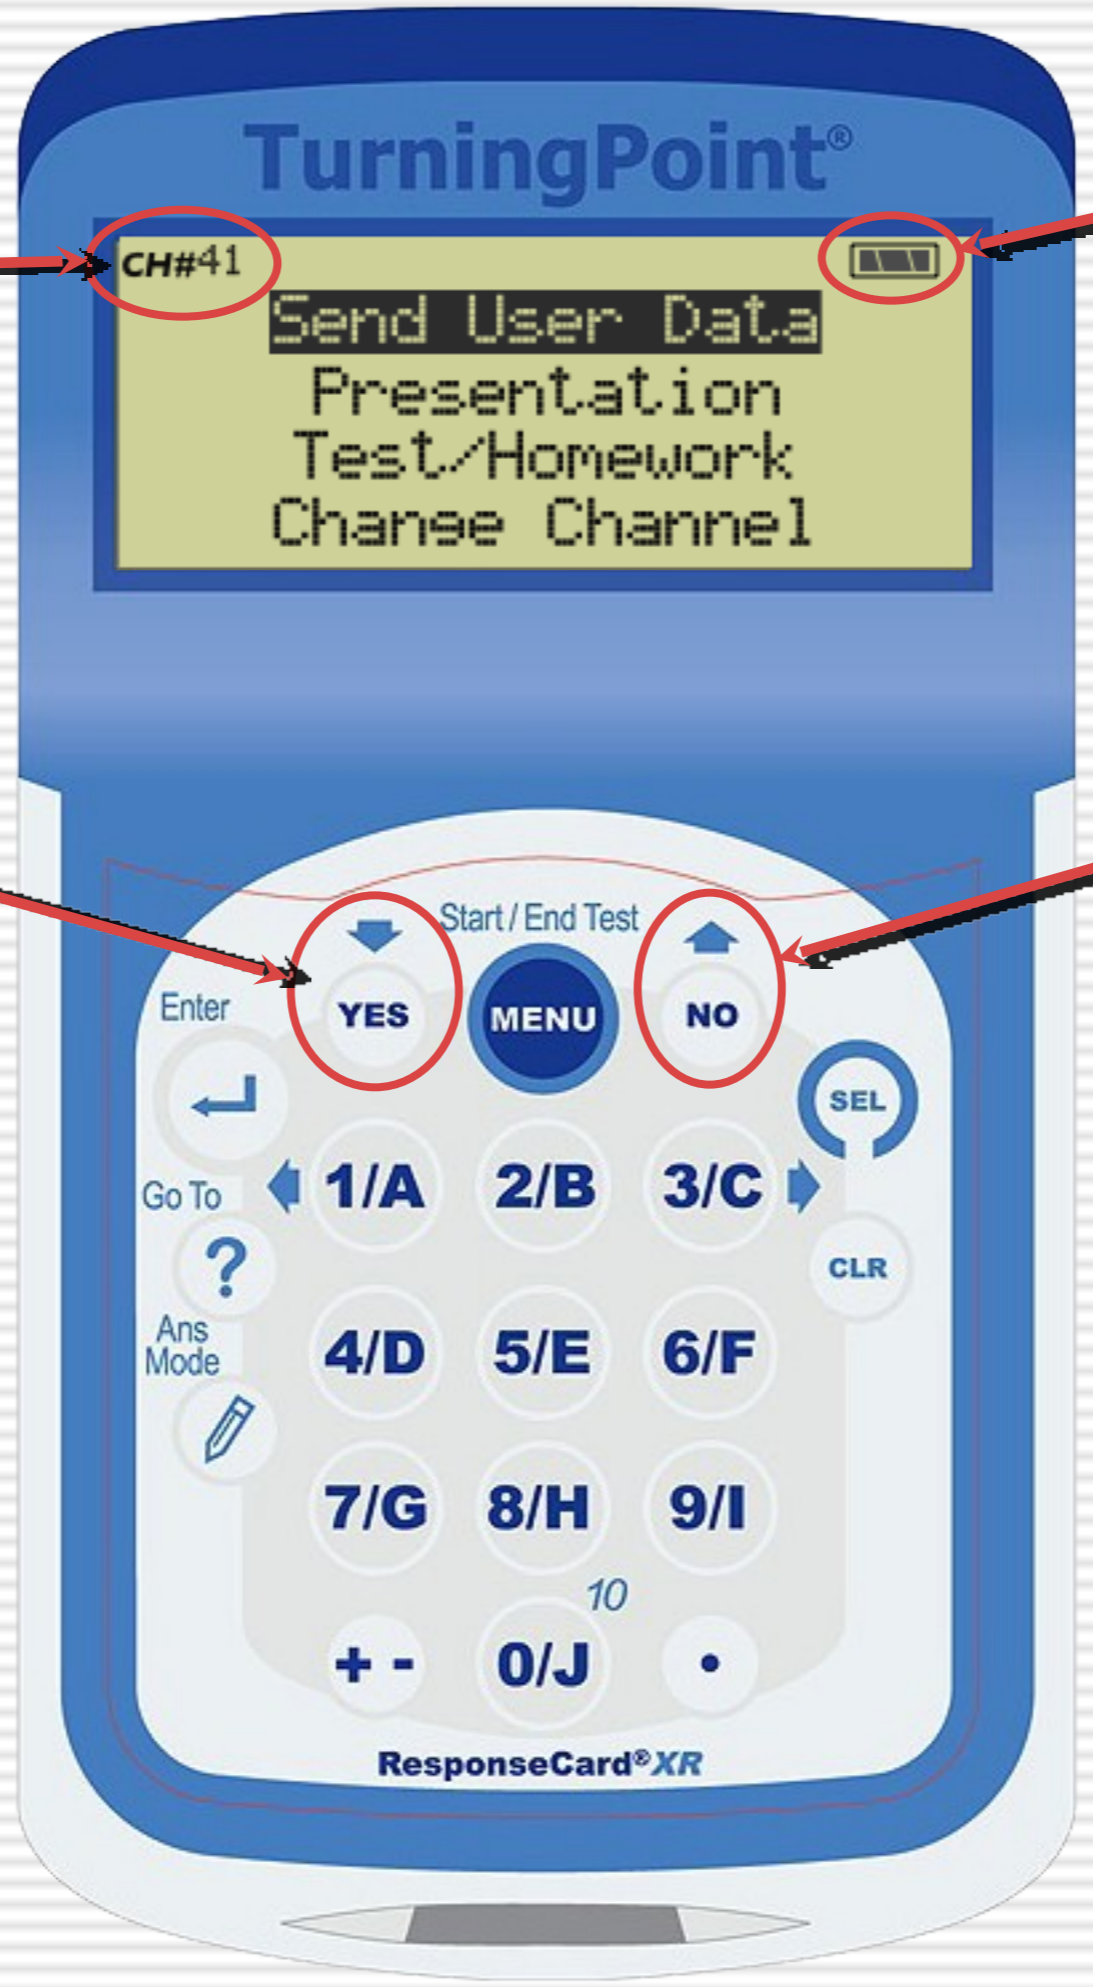

Press YES to scroll down through Menu


Press NO to scroll up

Navigating the Menu

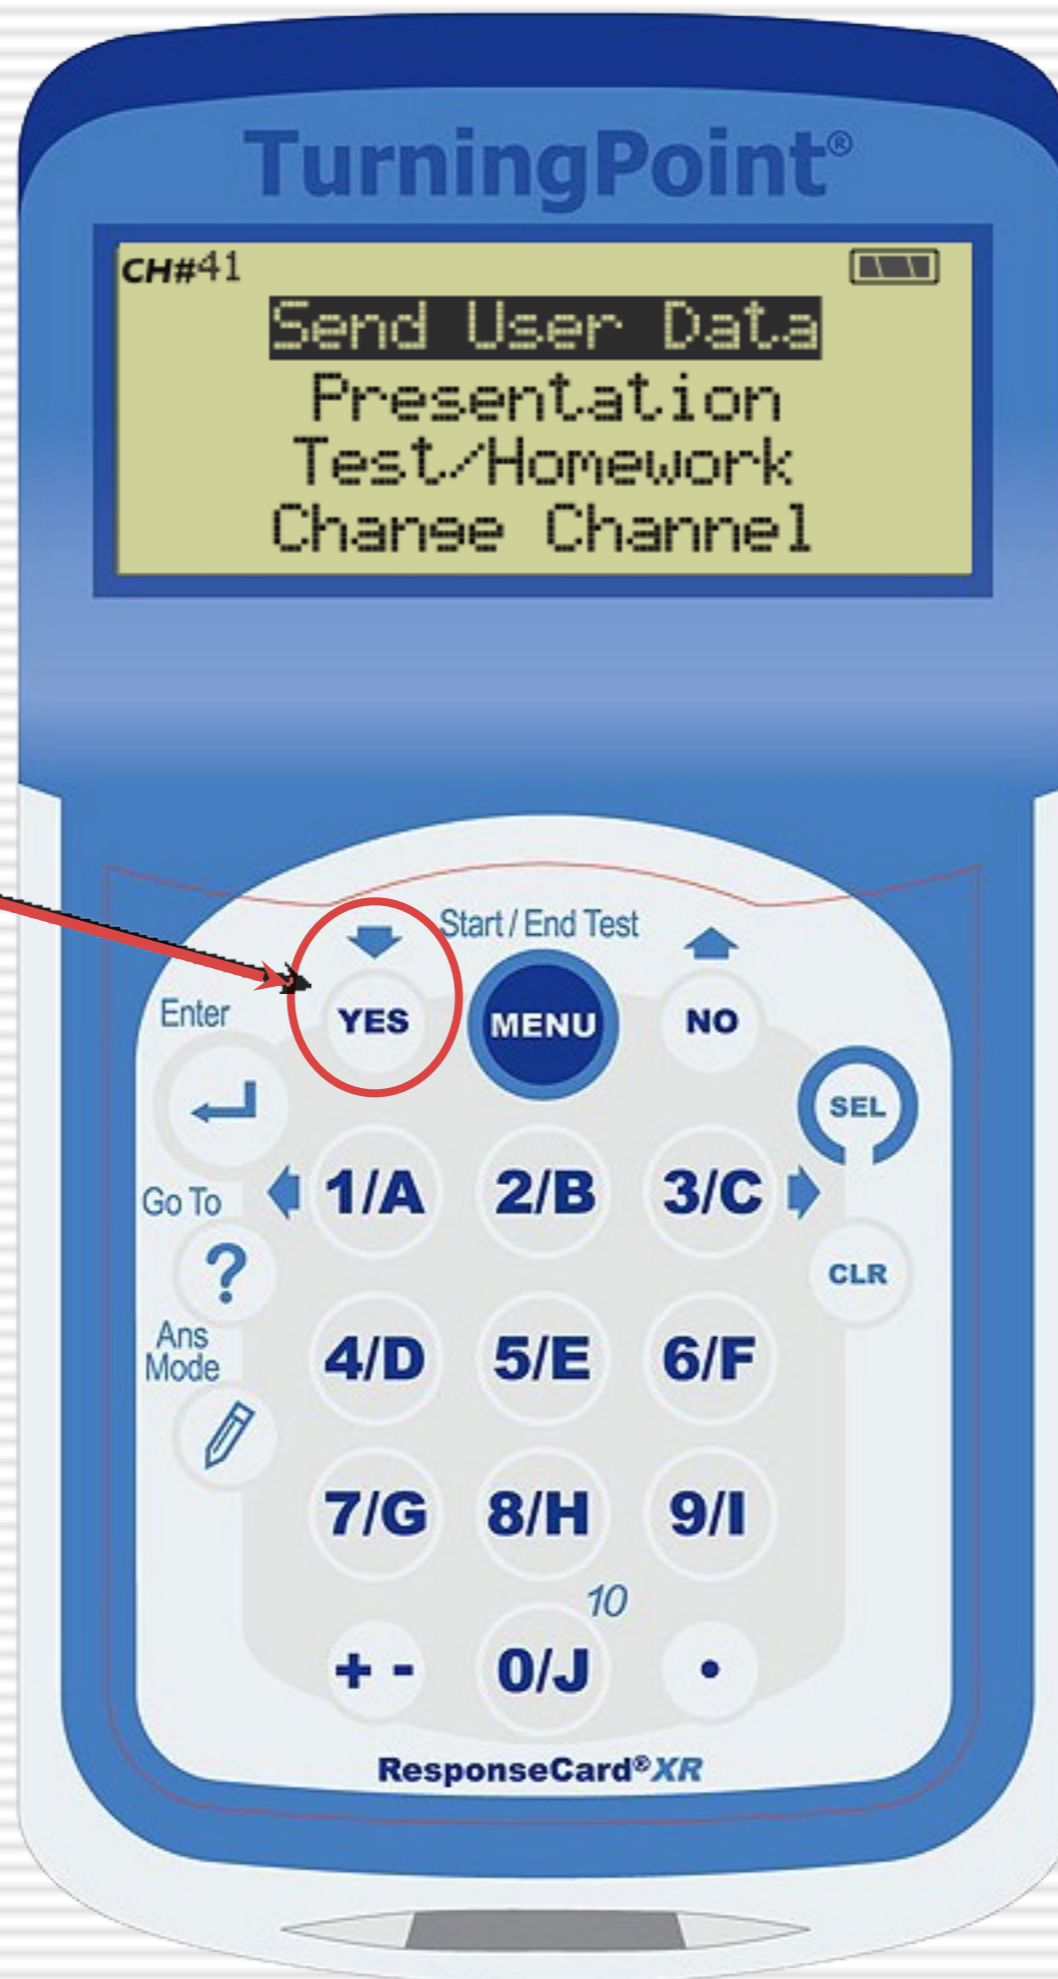


Press YES 4 times
to get to Setup
Menu


Navigating the Menu

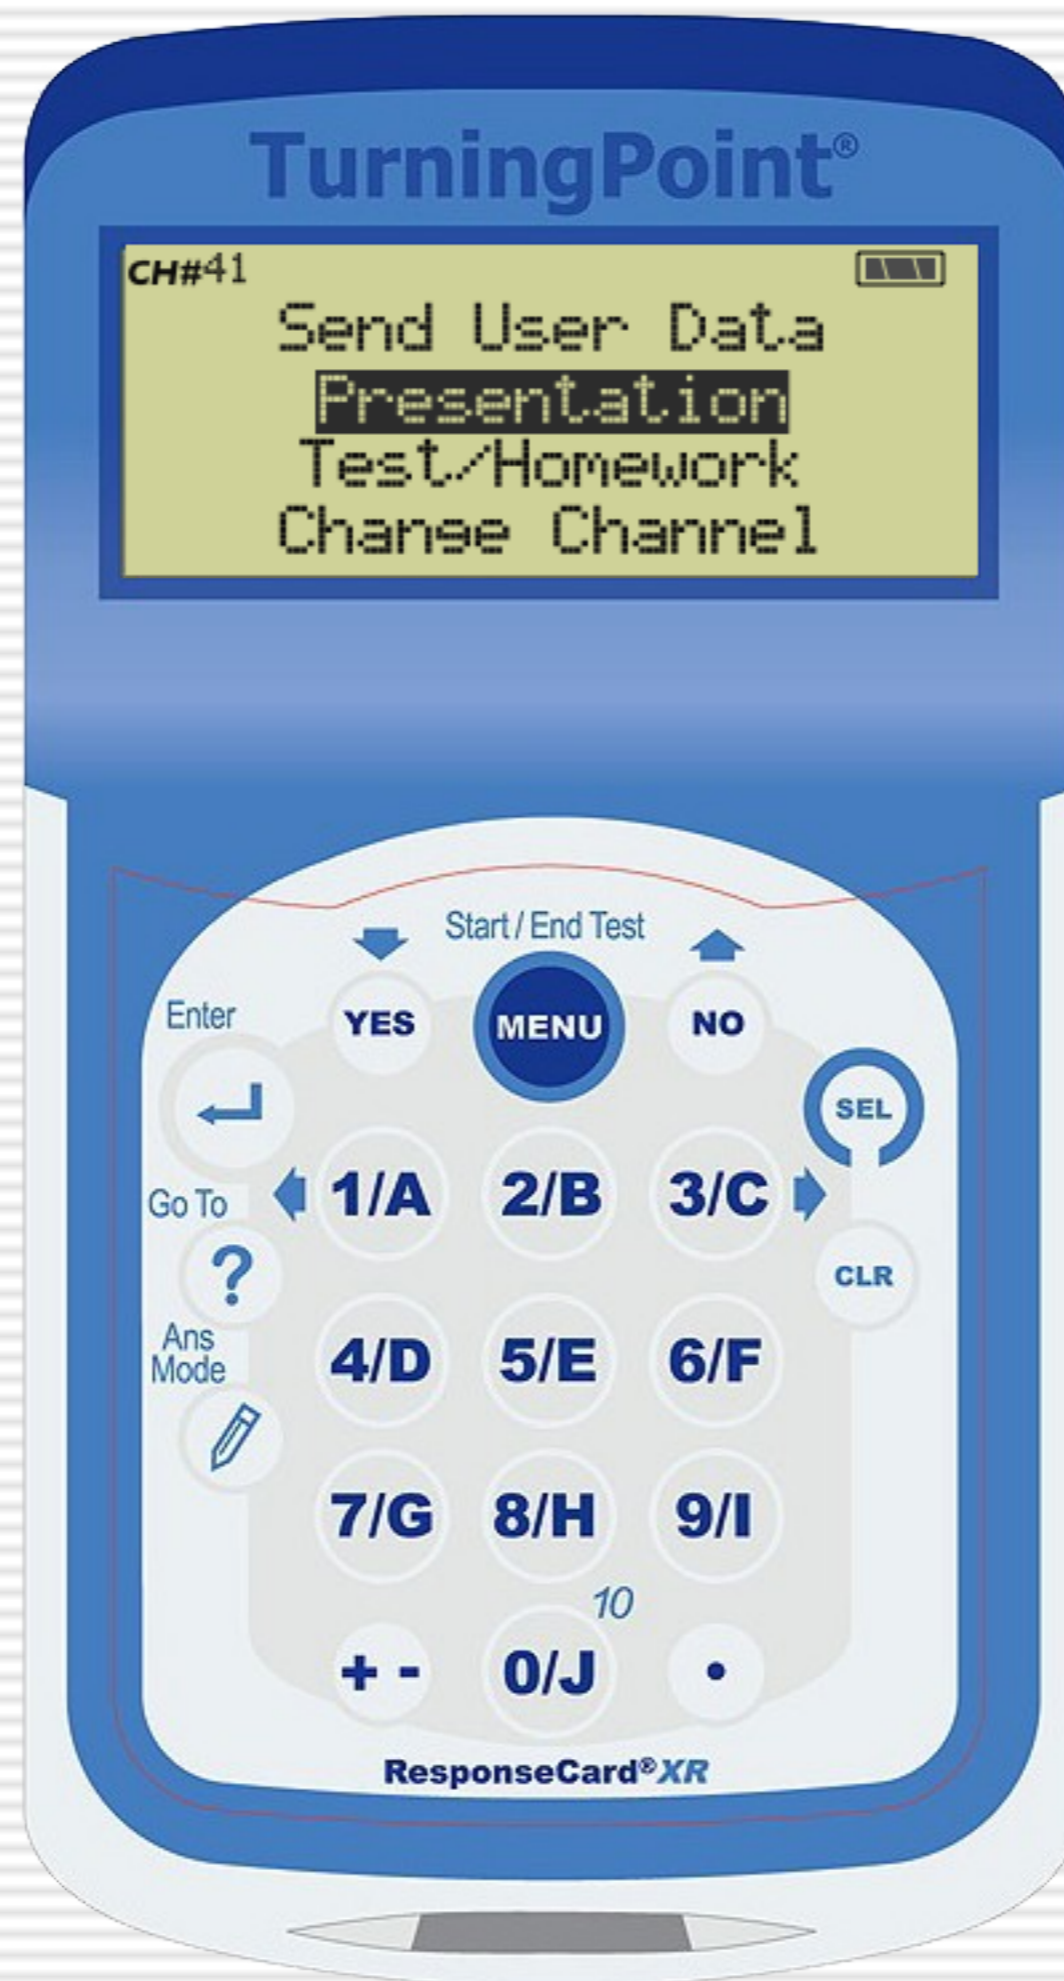


Navigating the Menu

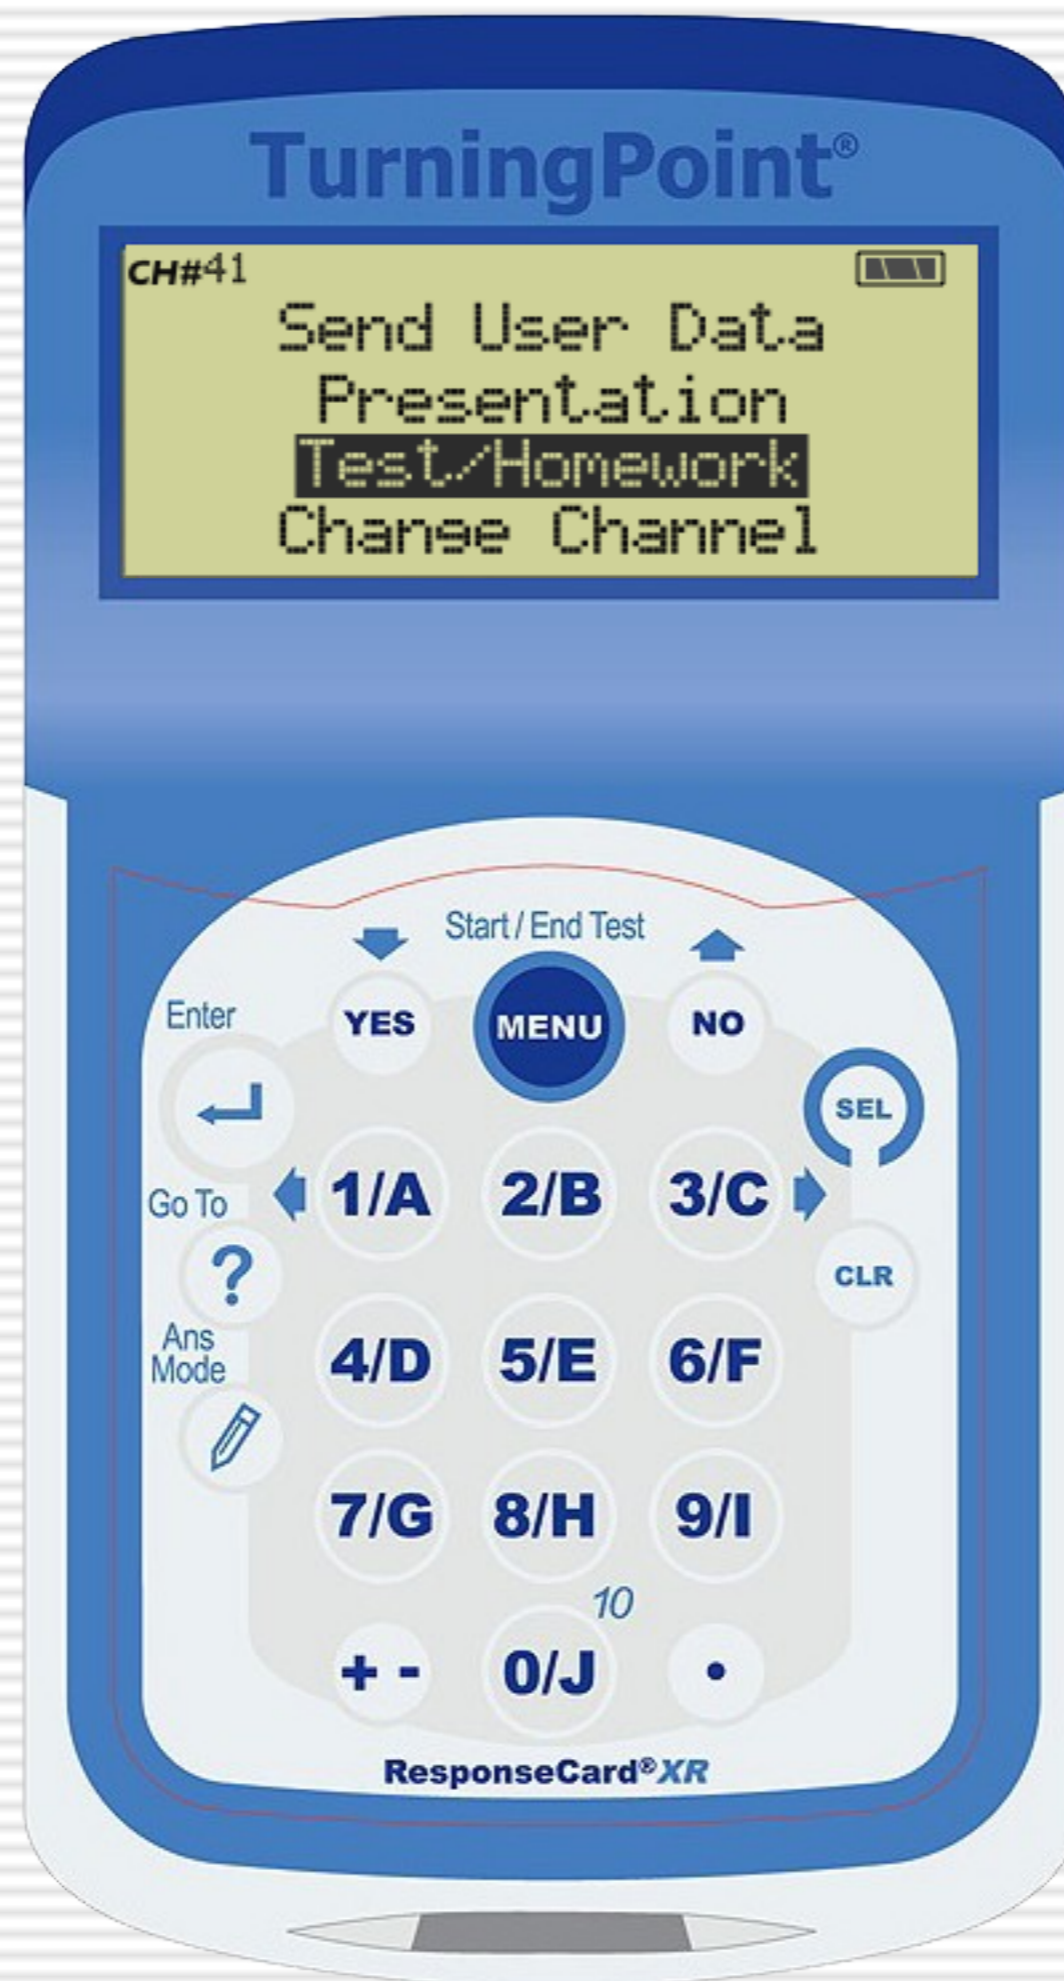

Navigating the Menu

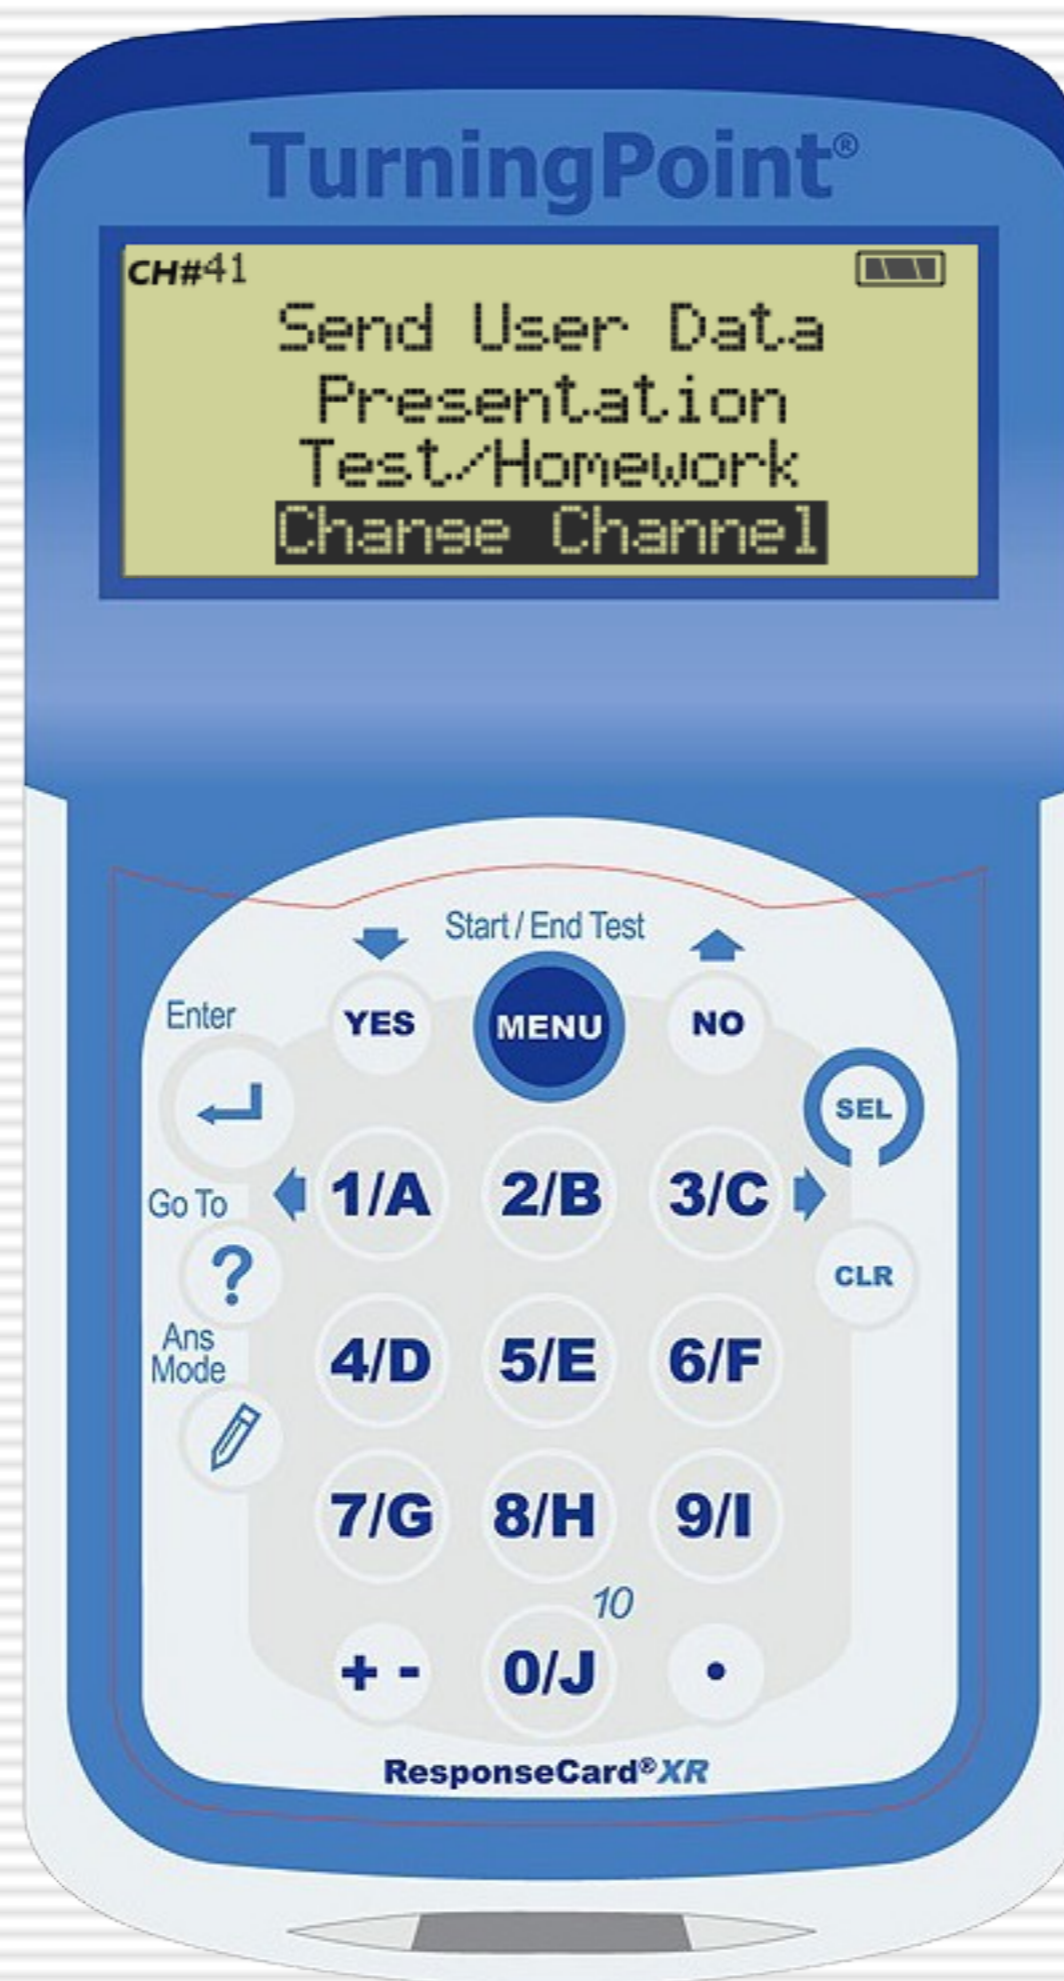


Setup Menu

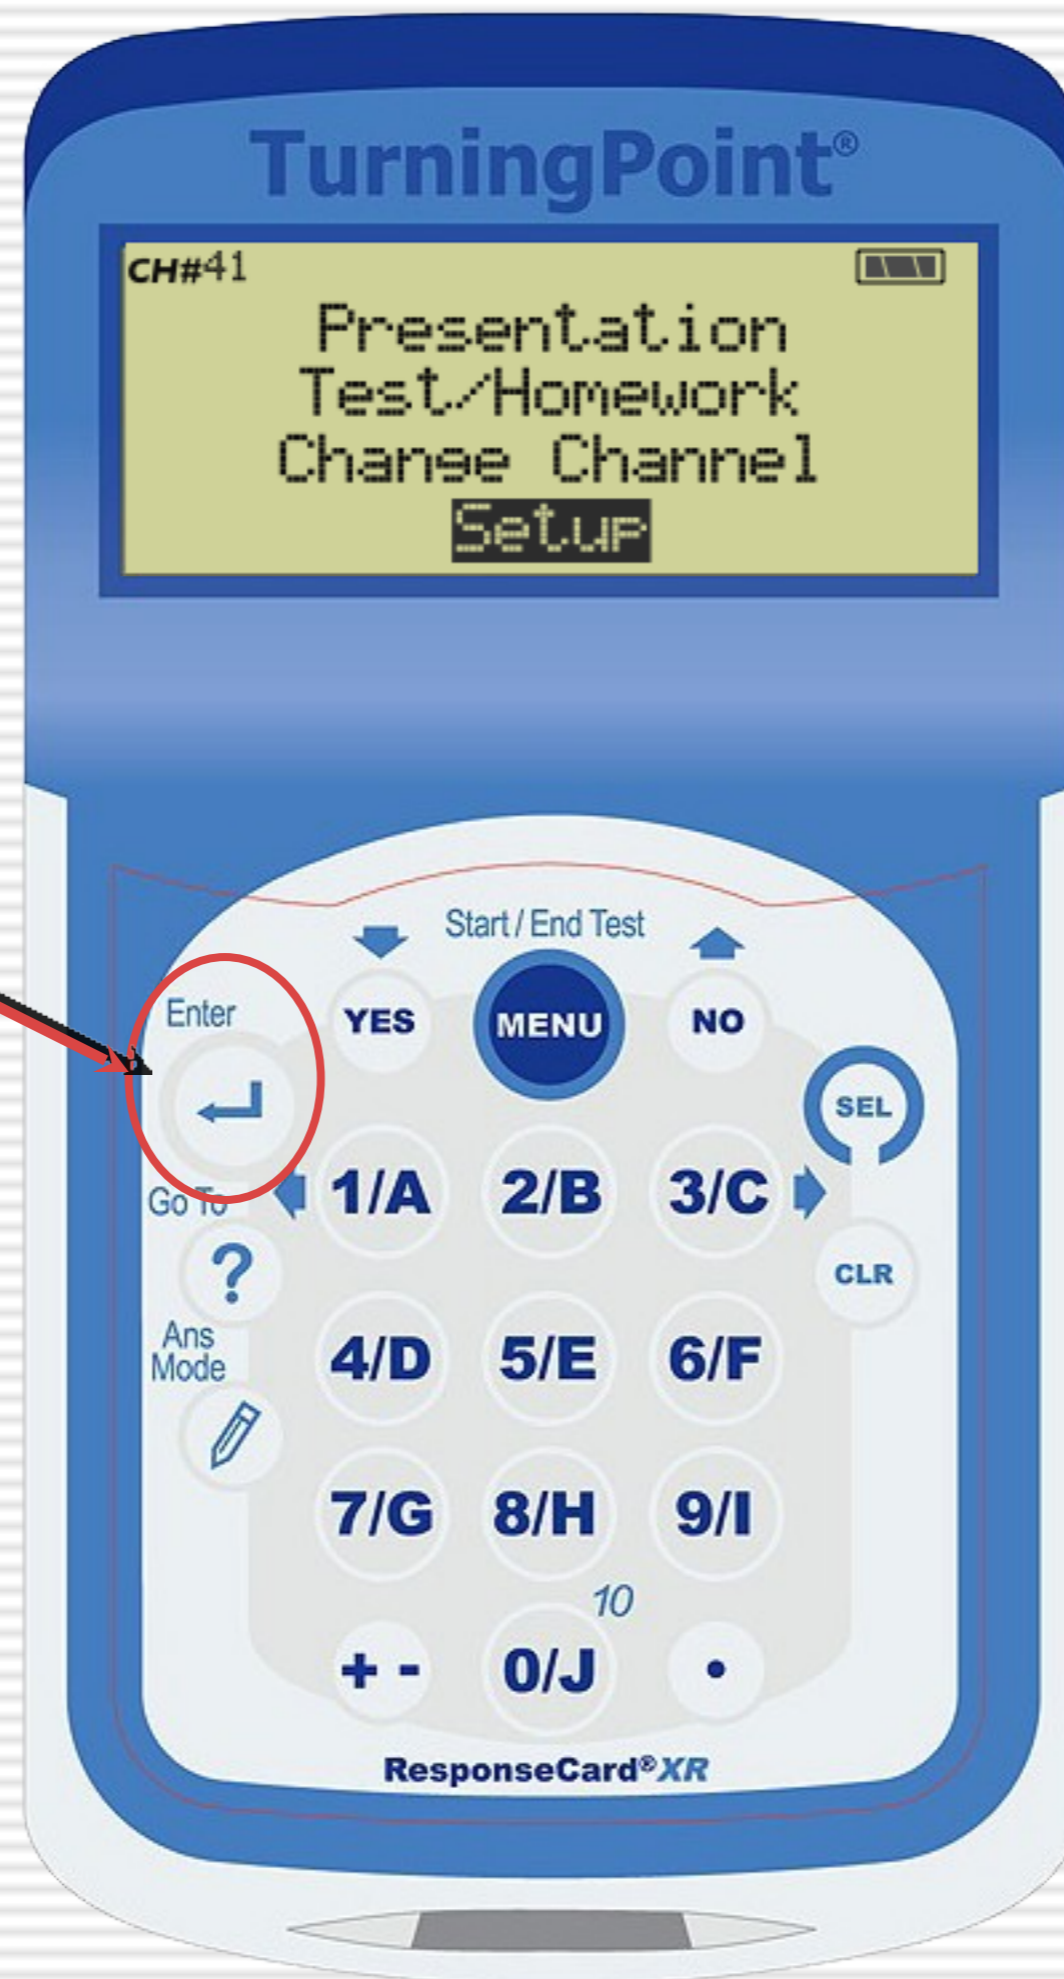

Press Enter to go into Setup Mode

(If the screen goes blank, press any key except the **MENU** key)


Select User Data

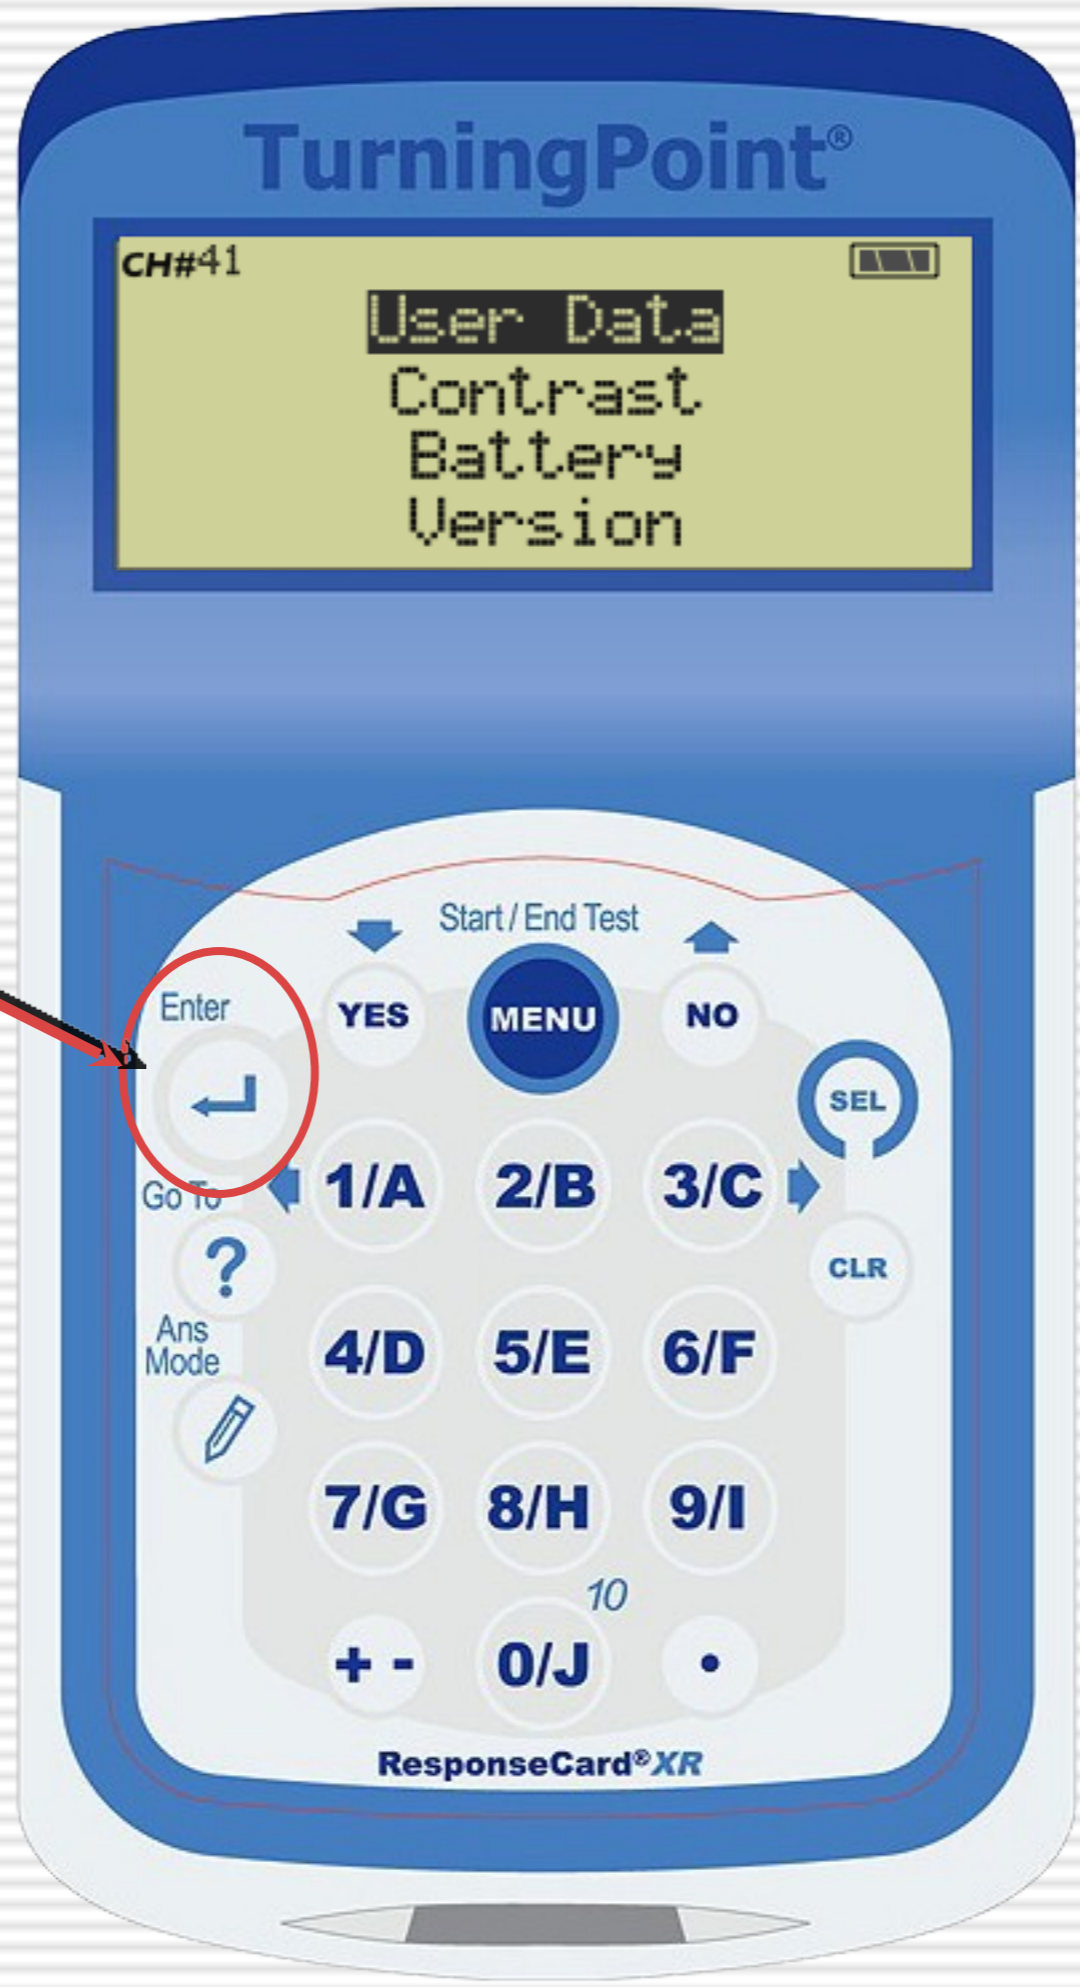

Press Enter to go into User Data




Edit User Data

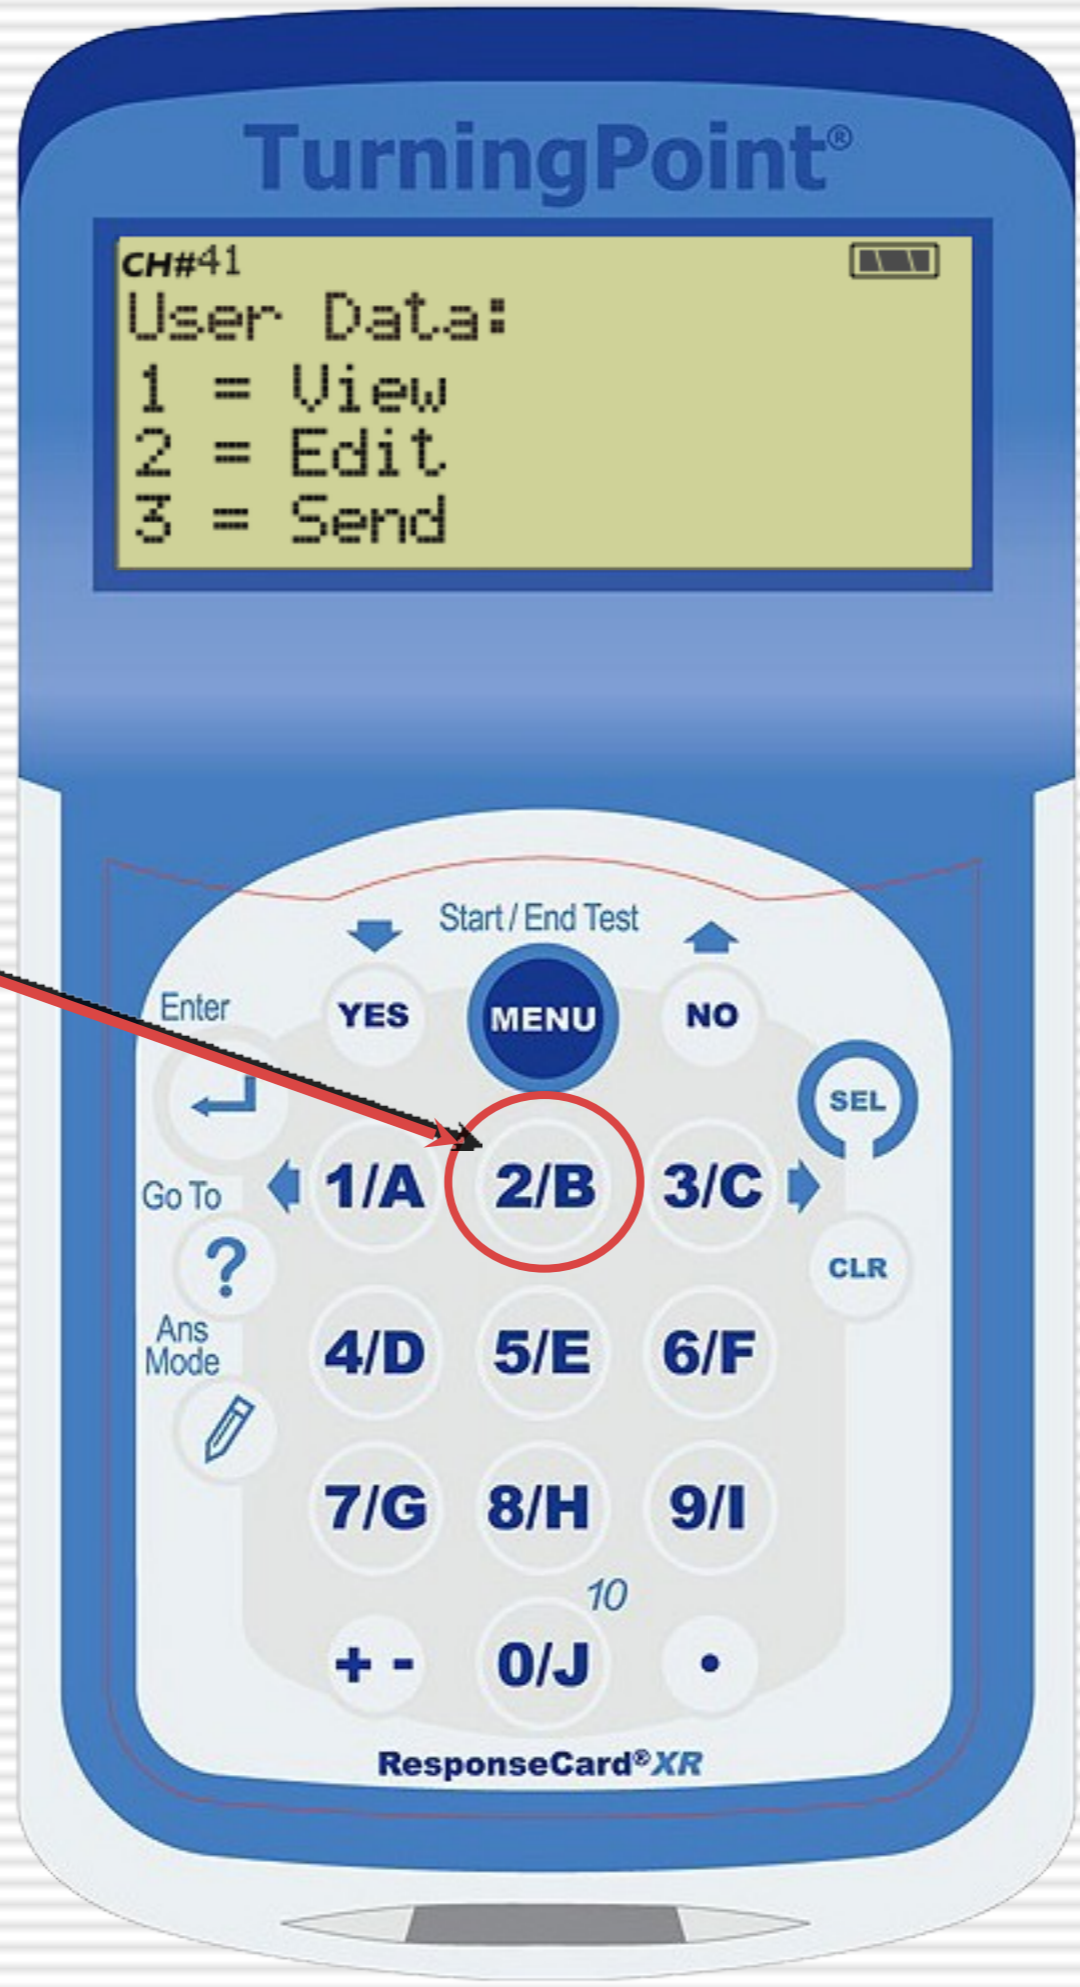


Press 2 to Edit your User Data

Enter First Name

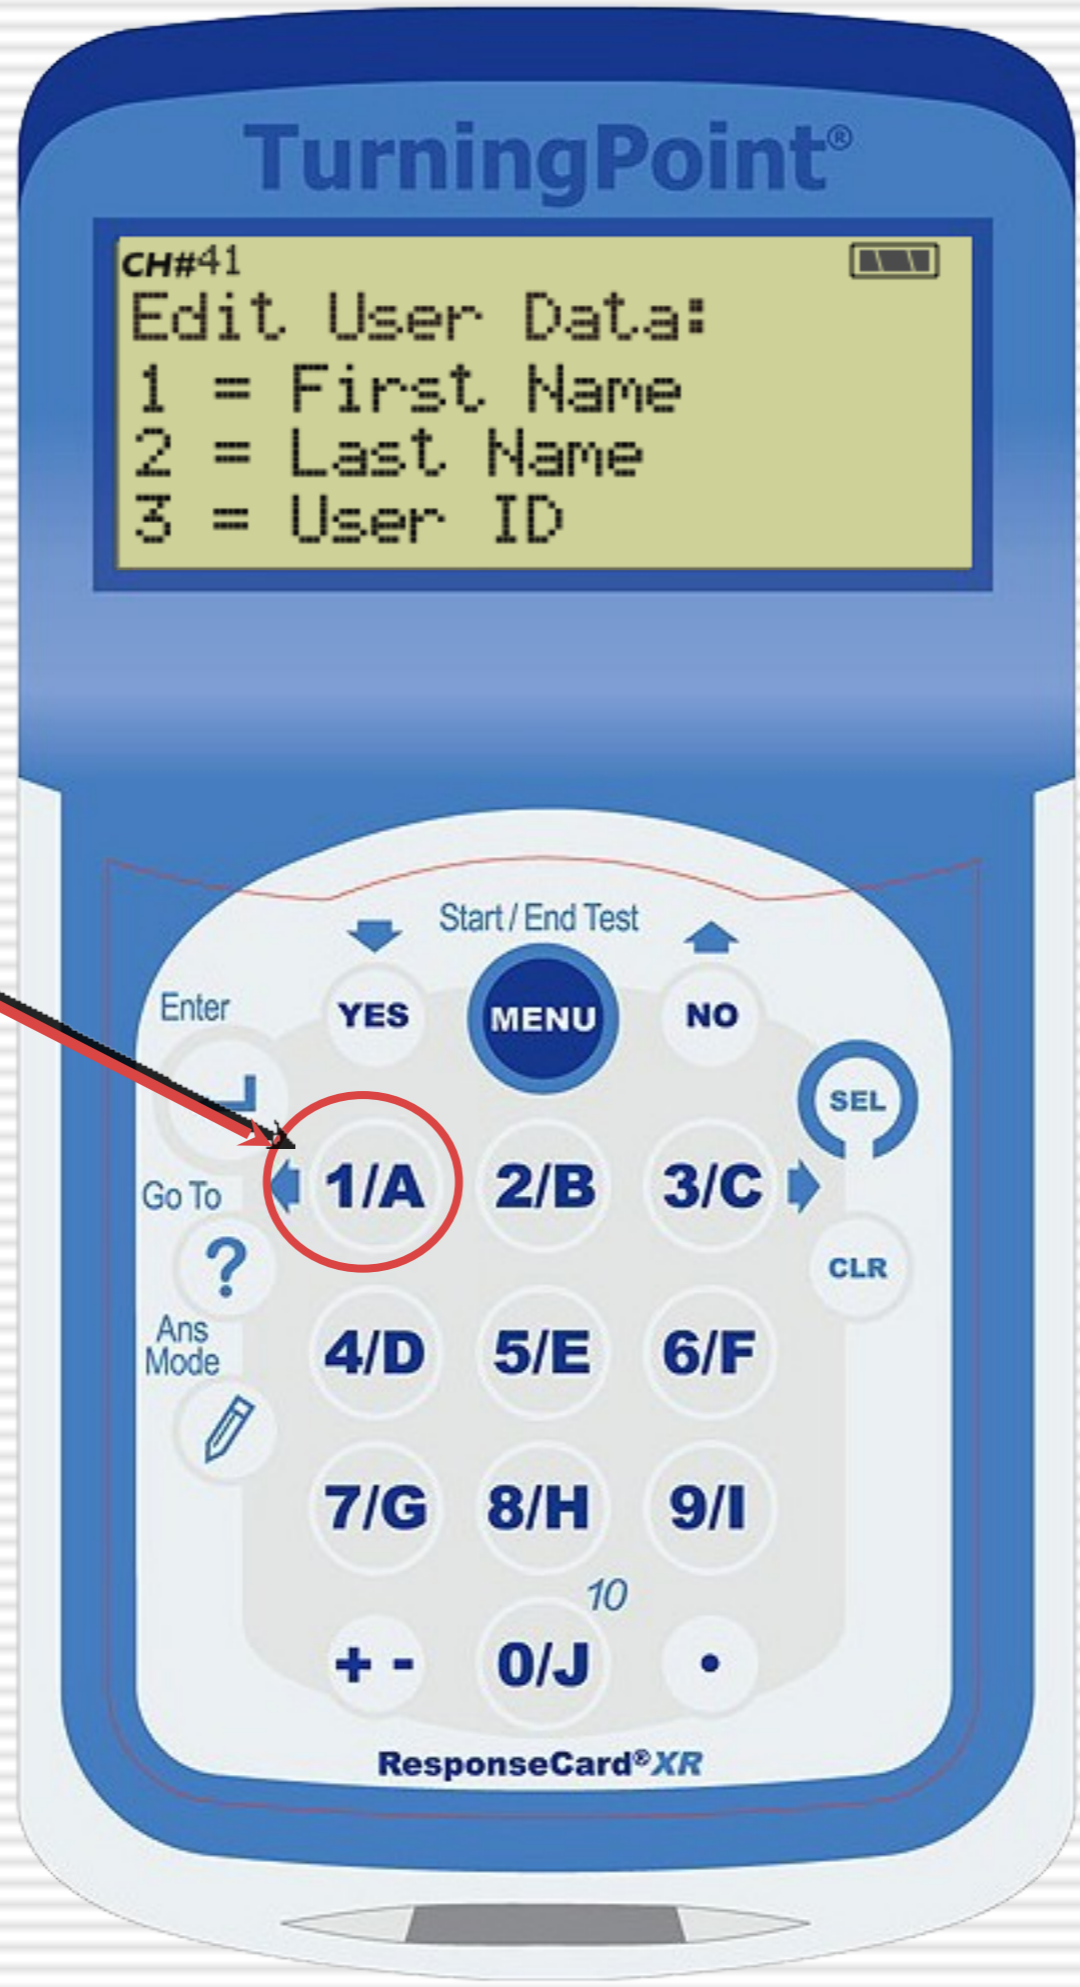

Press 1 to enter your first name


Selecting Letters

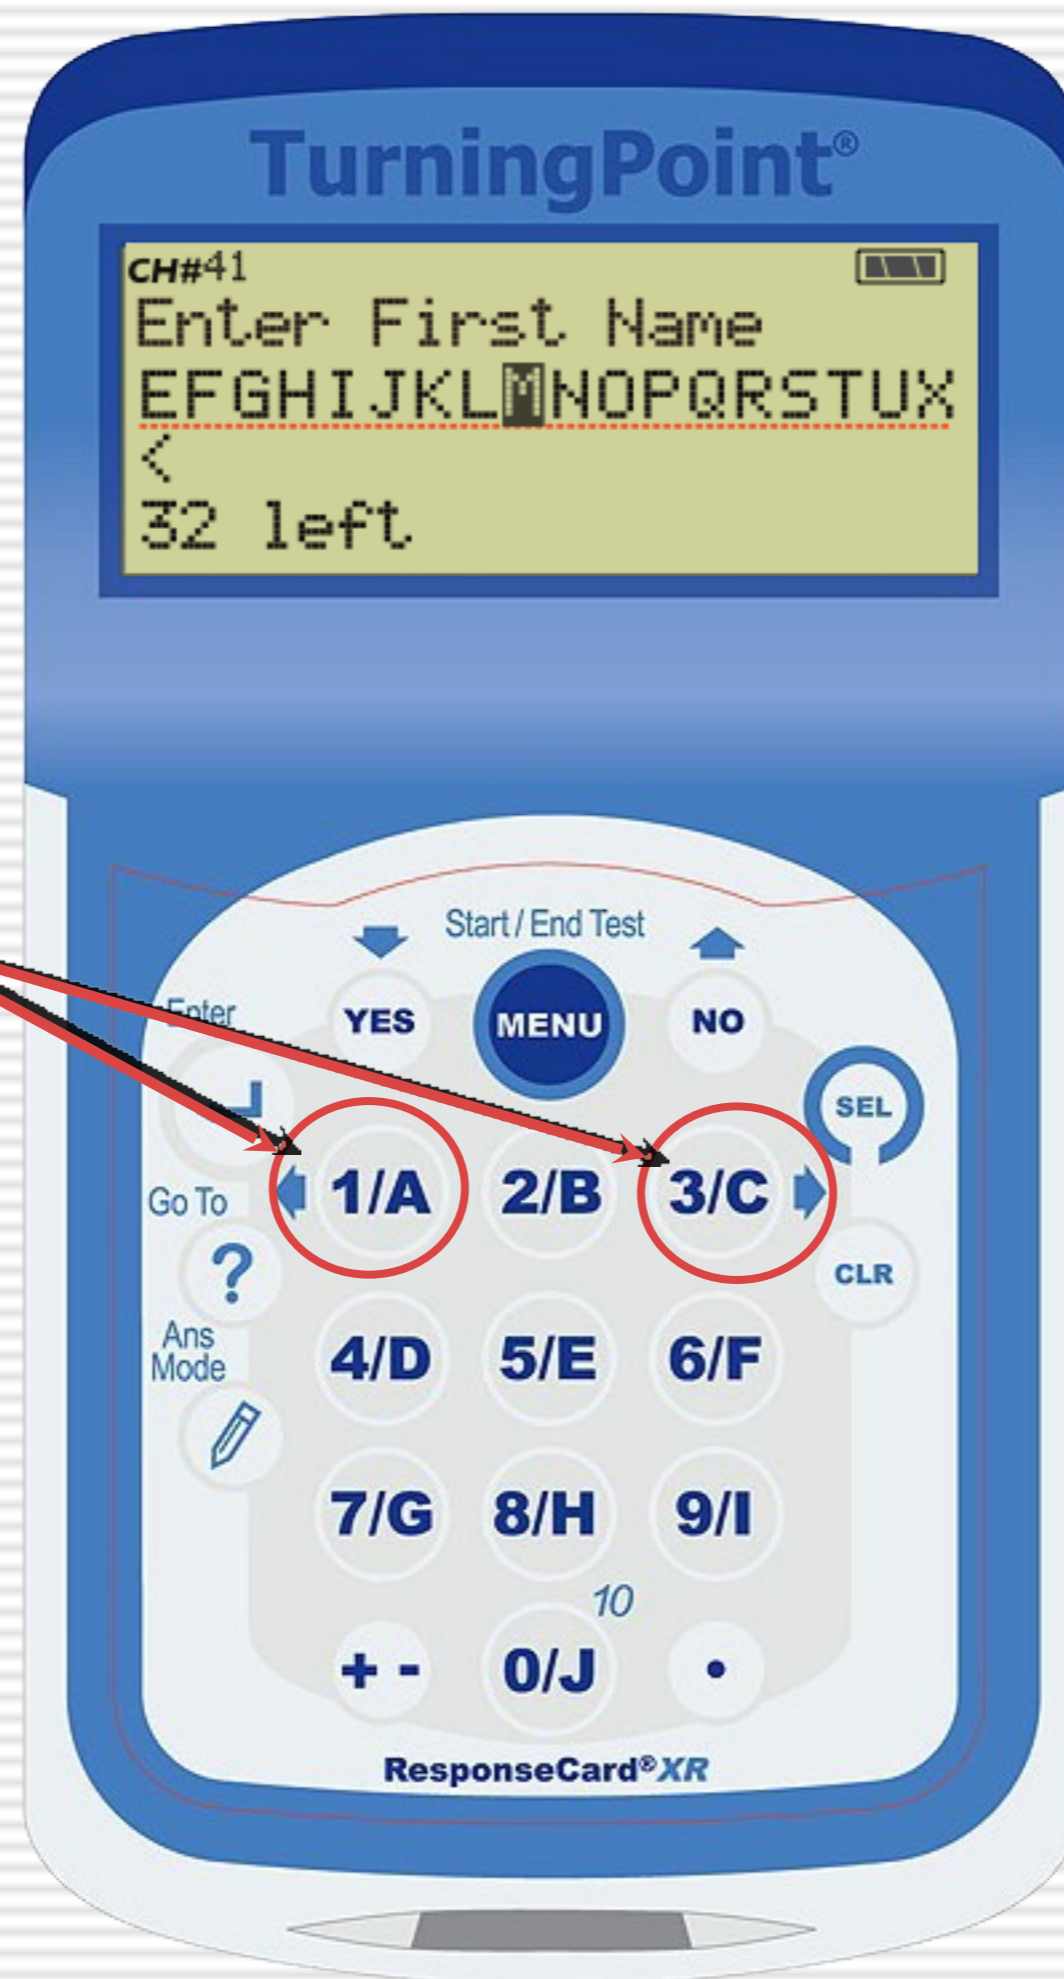


Use the left and right arrows to select the first letter of your first name

Selecting Letters

Press the left arrow once to select the letter L

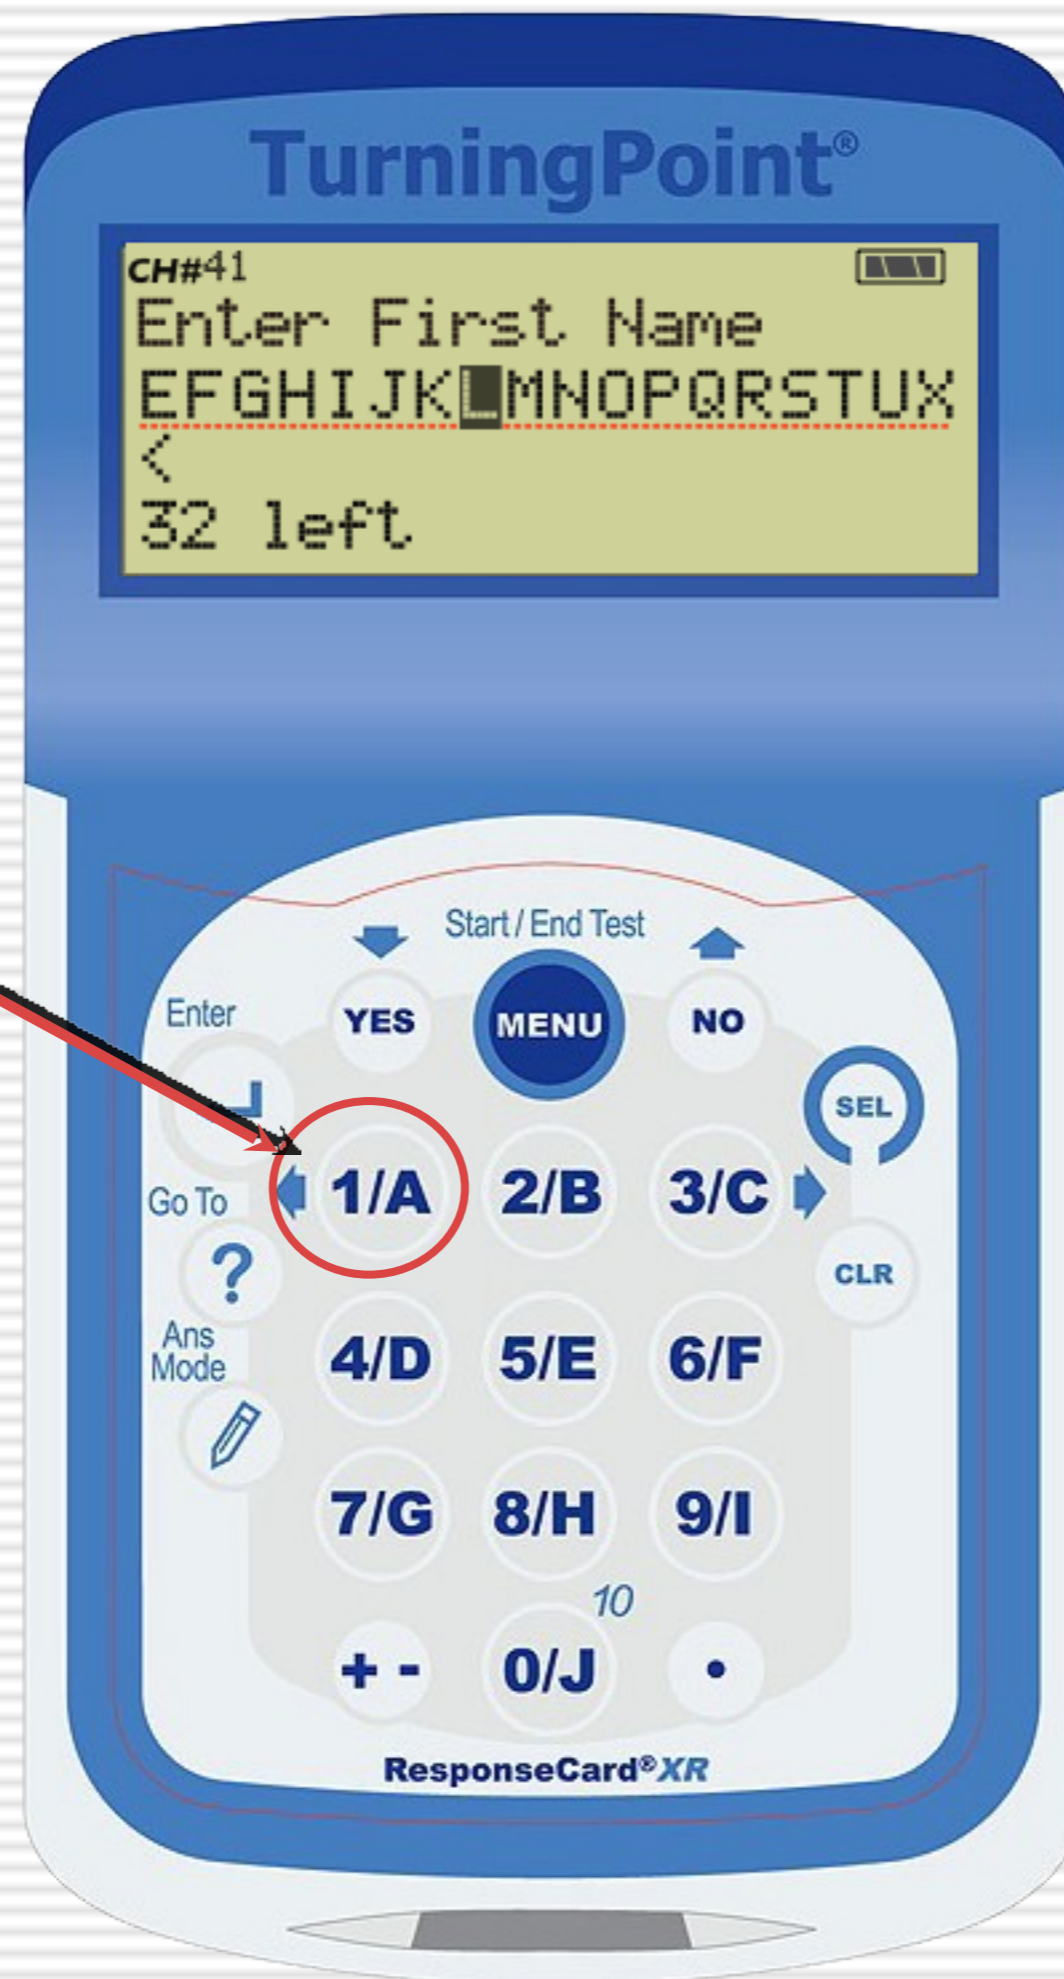

Entering the First Letter

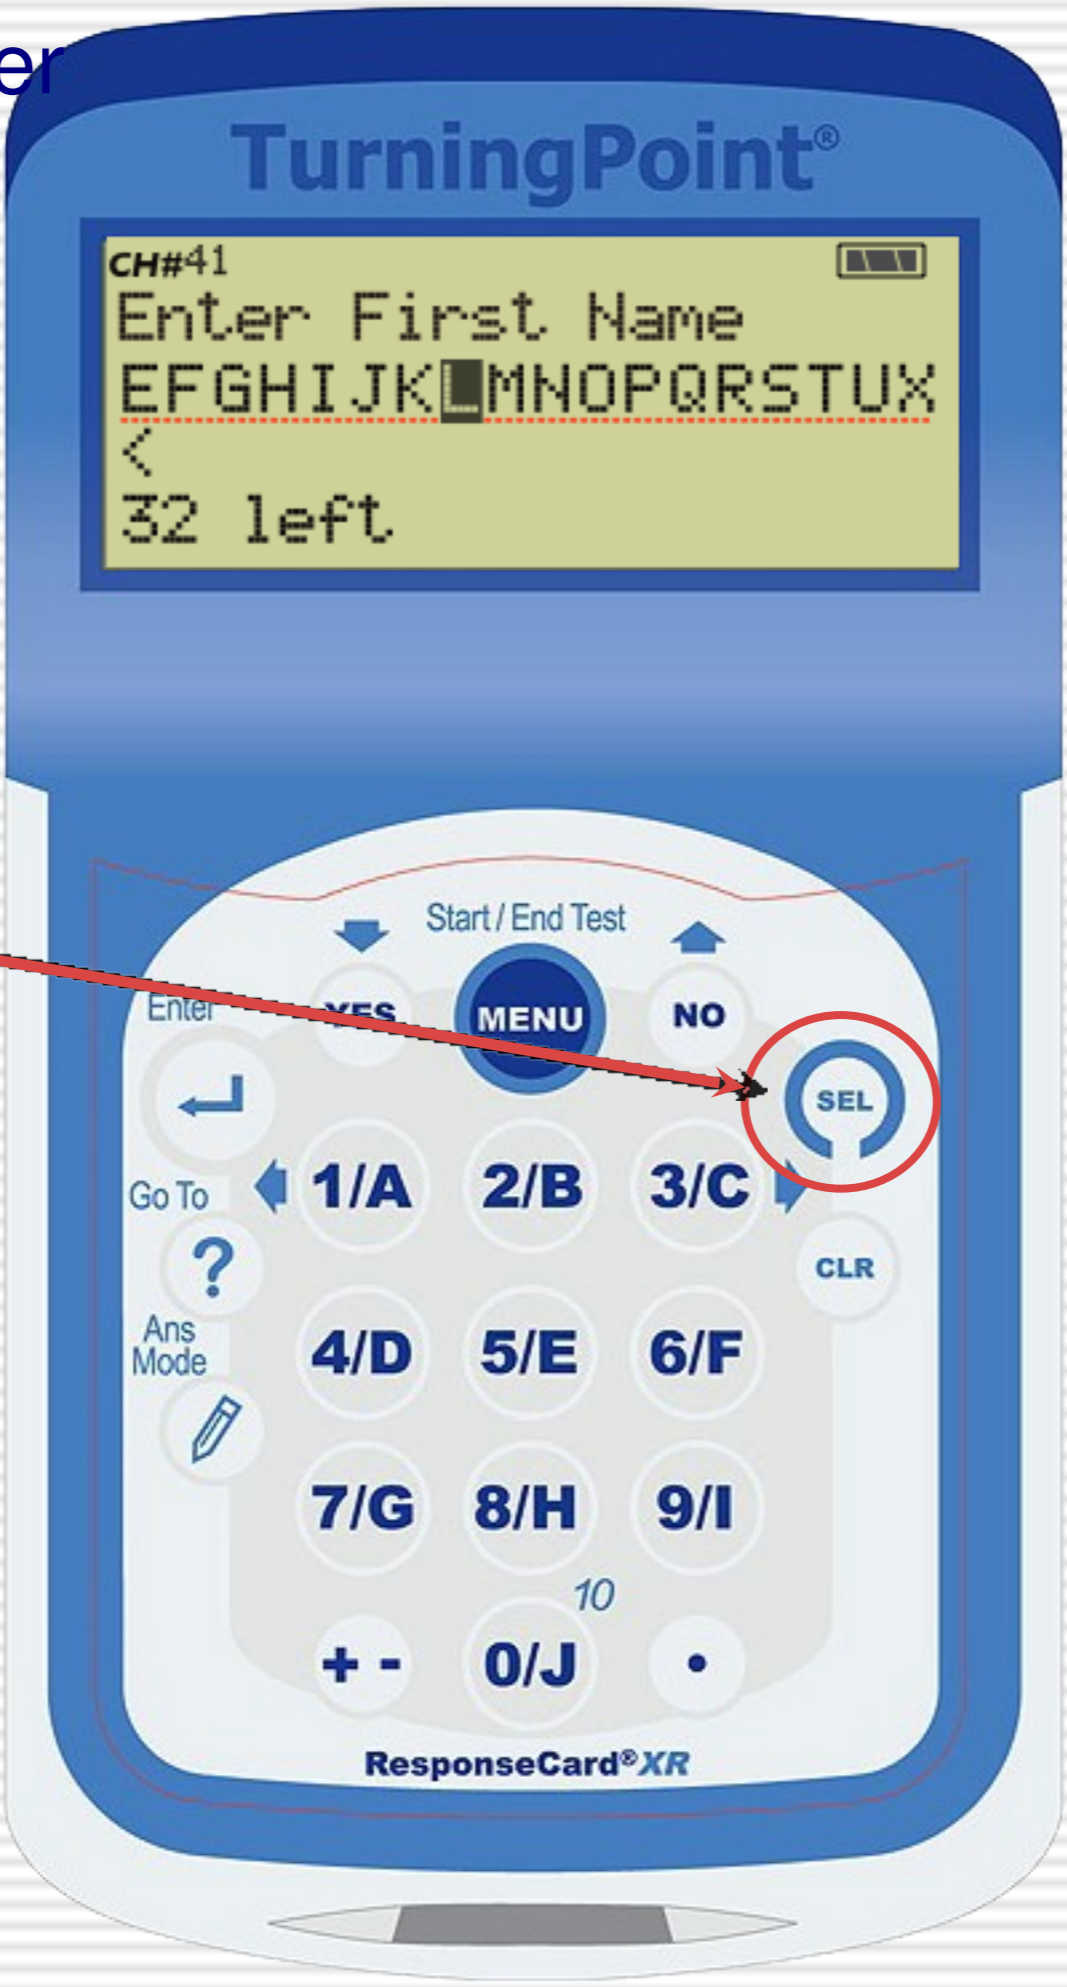


Press SEL to select the first letter

Ready for more letters




Making Corrections

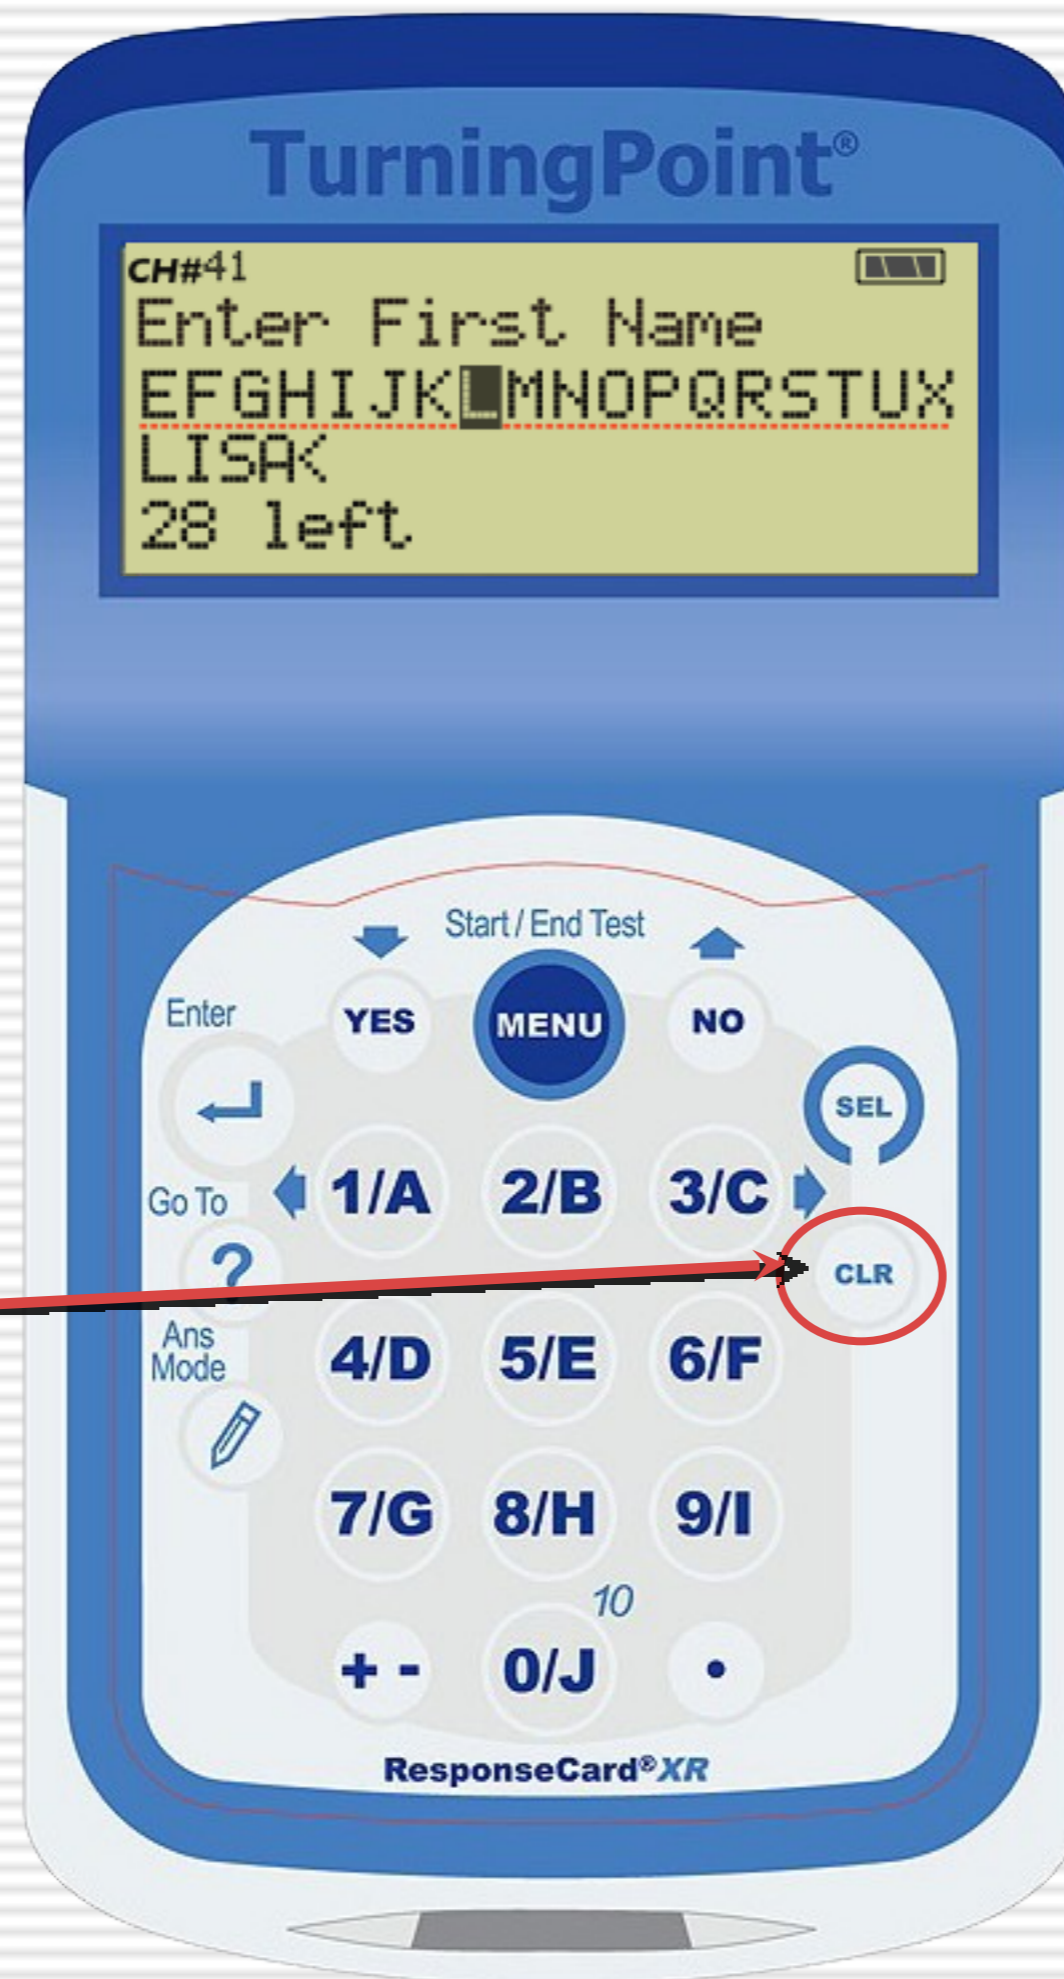

Use the left and right arrows to continue spelling your name

Use the CLR button to backspace and make corrections

Done Entering Name

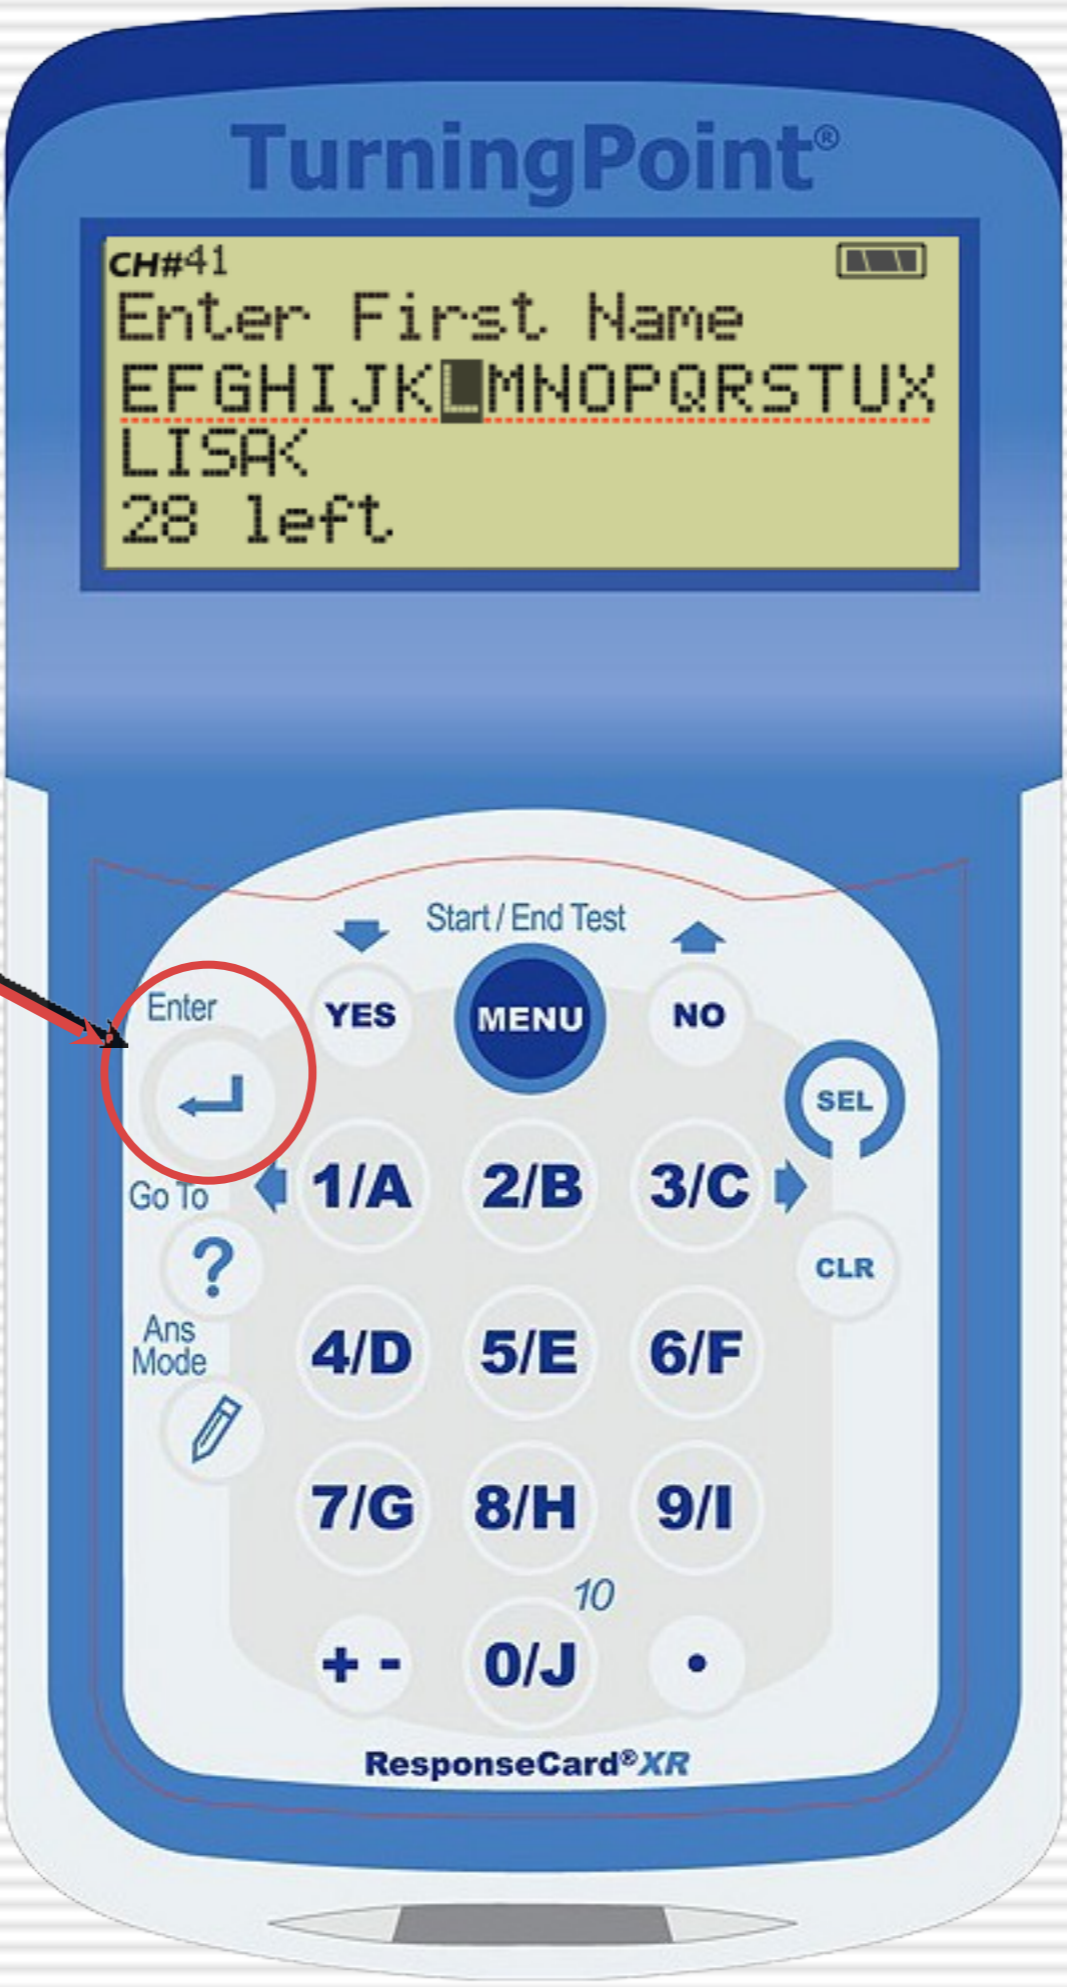


When you are done, press the Enter button

Do not press the MENU button as your changes will not be saved.


Cancel Send Data

After pressing the Enter button, you will get this screen

Press NO

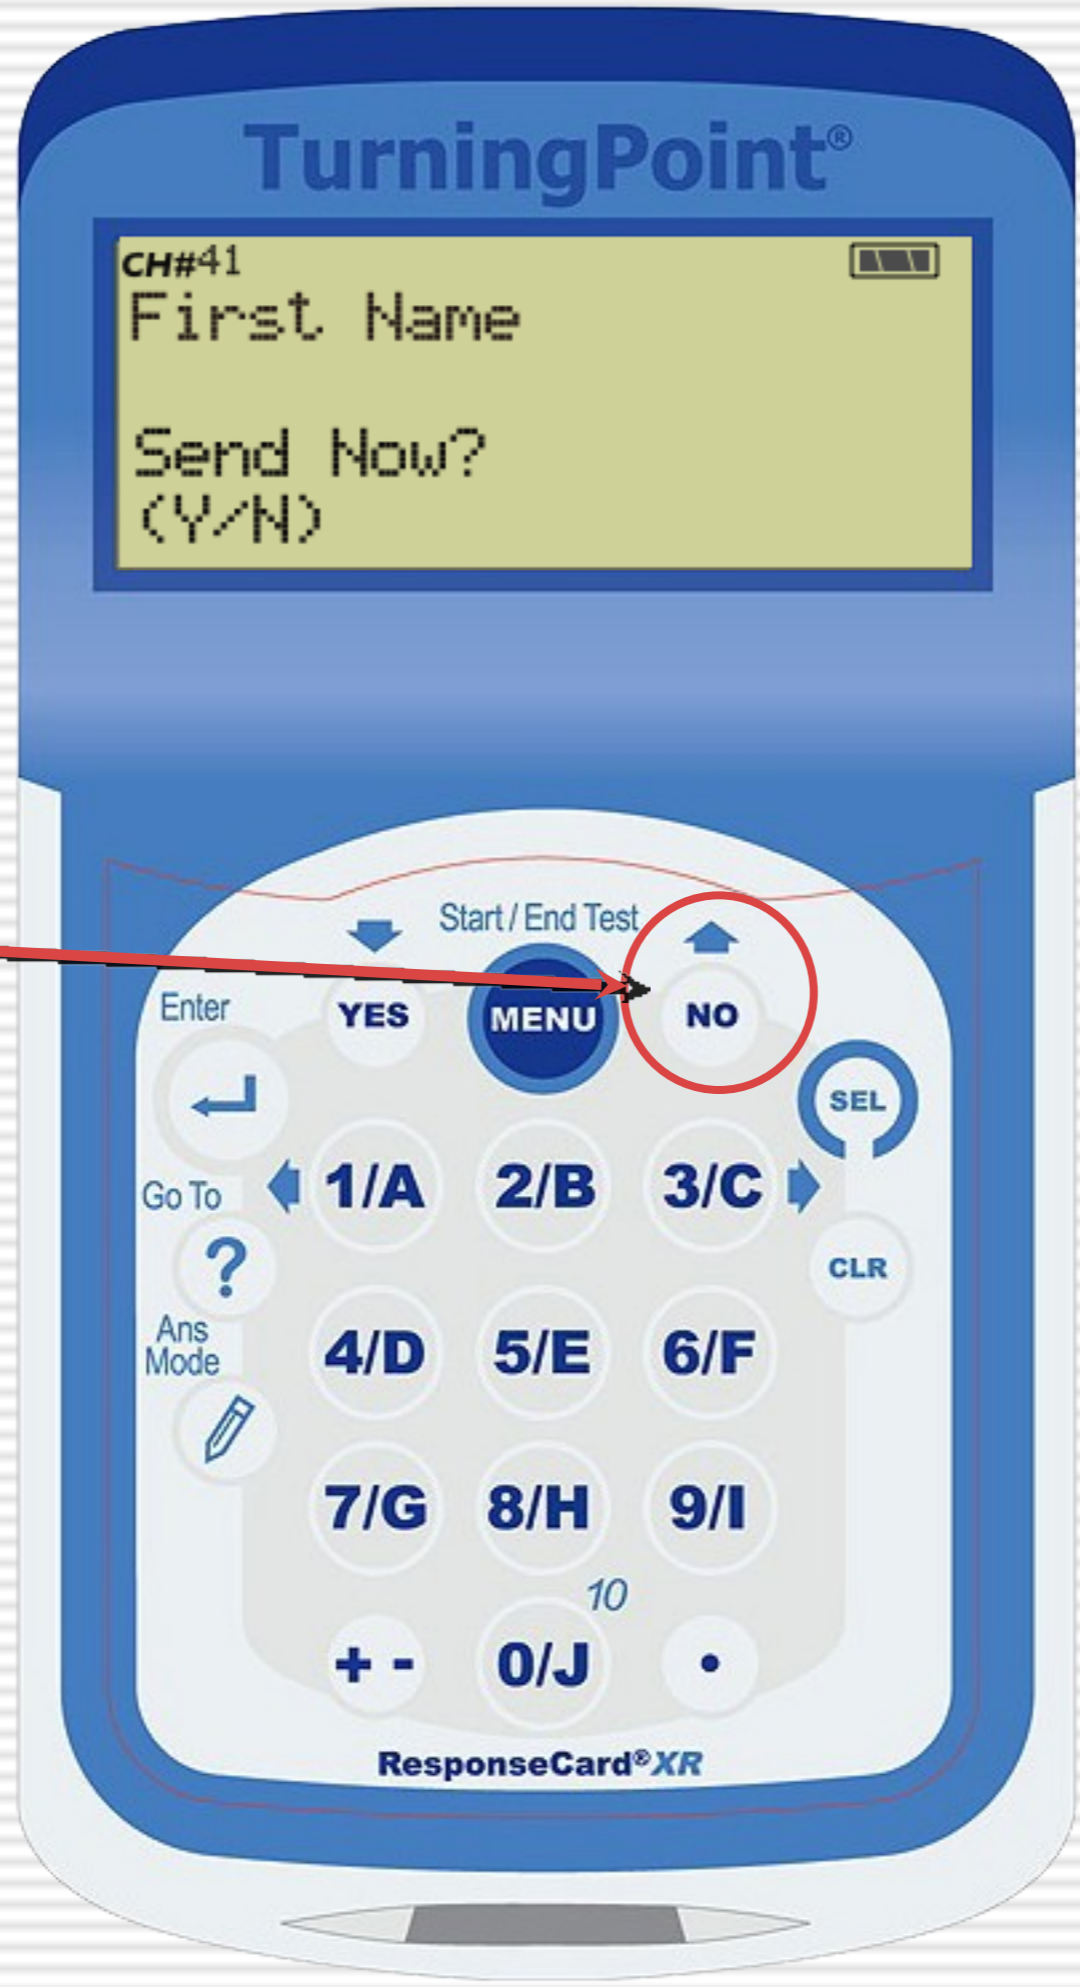


Enter Last Name

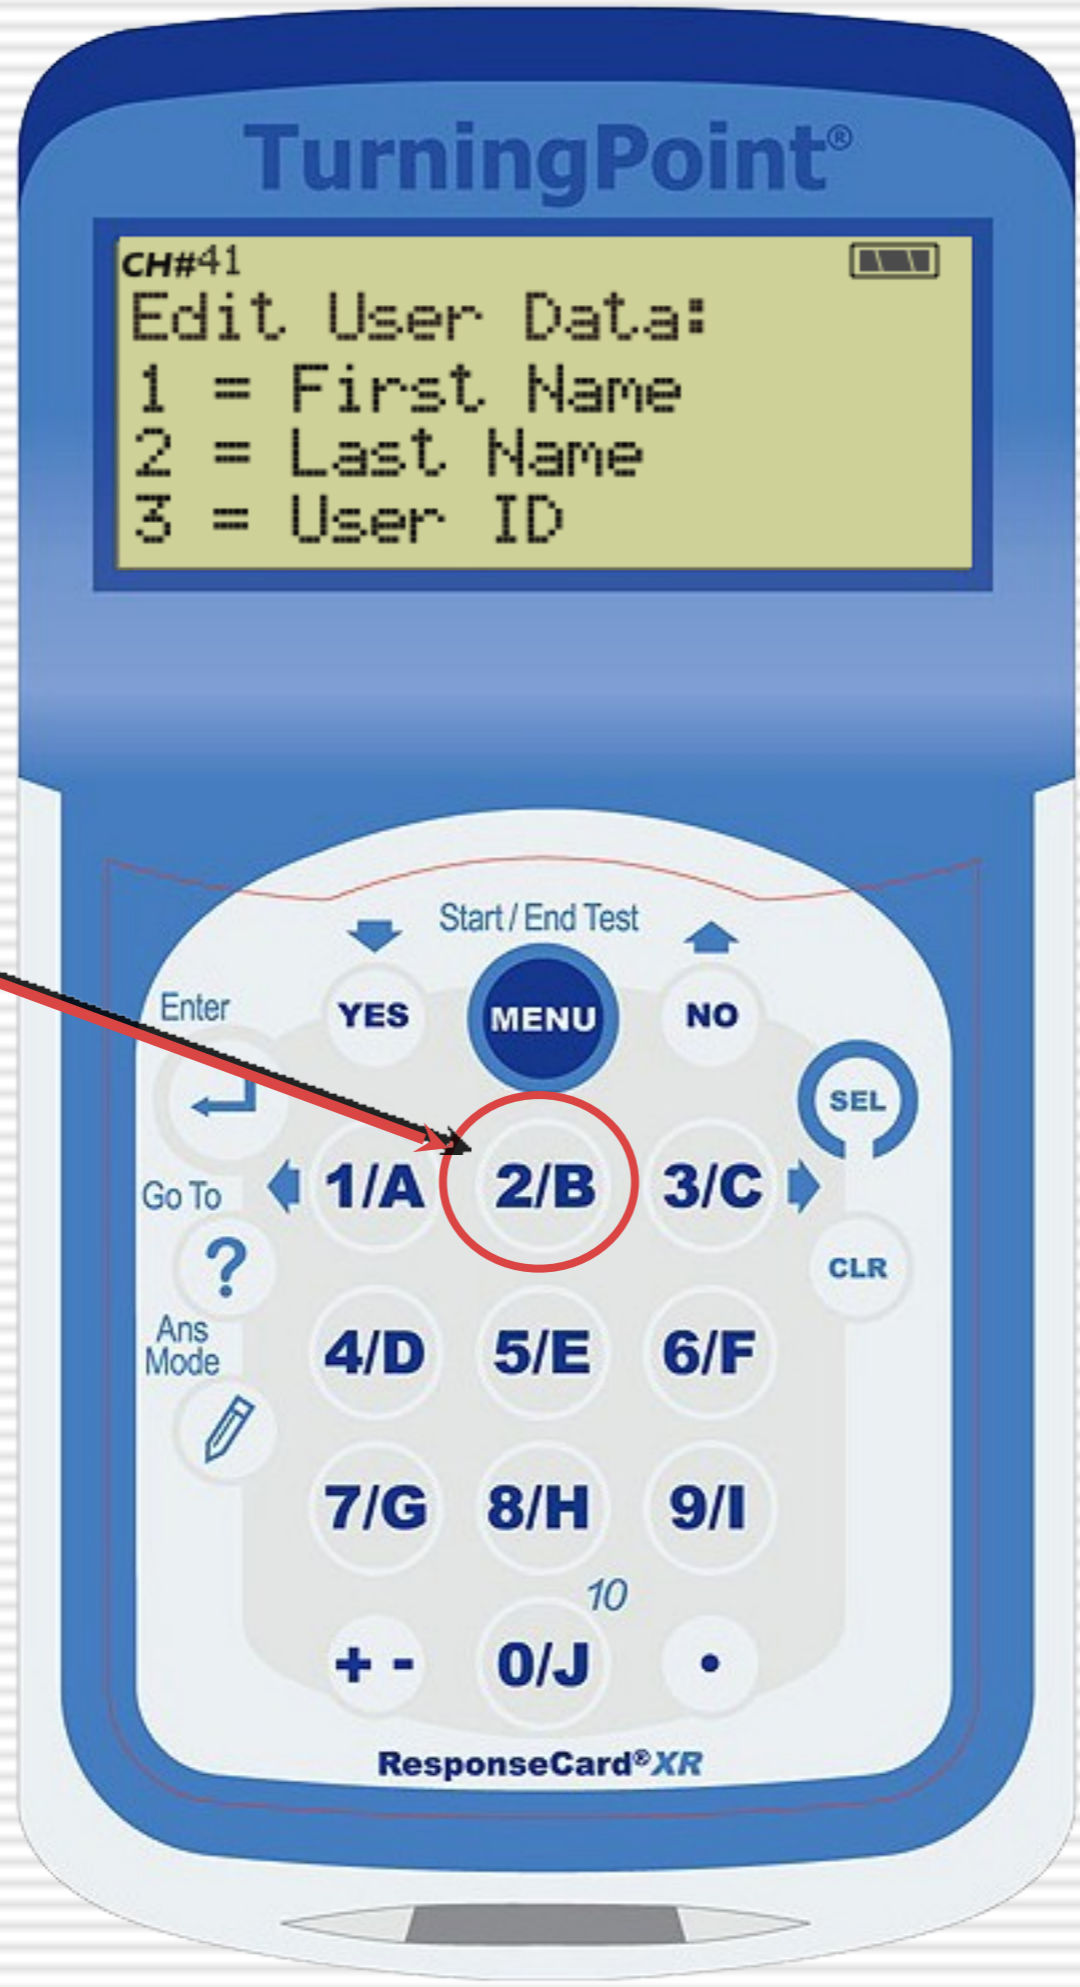


Press 2 to enter your last name - follow the same procedures as your first name

Enter Used ID

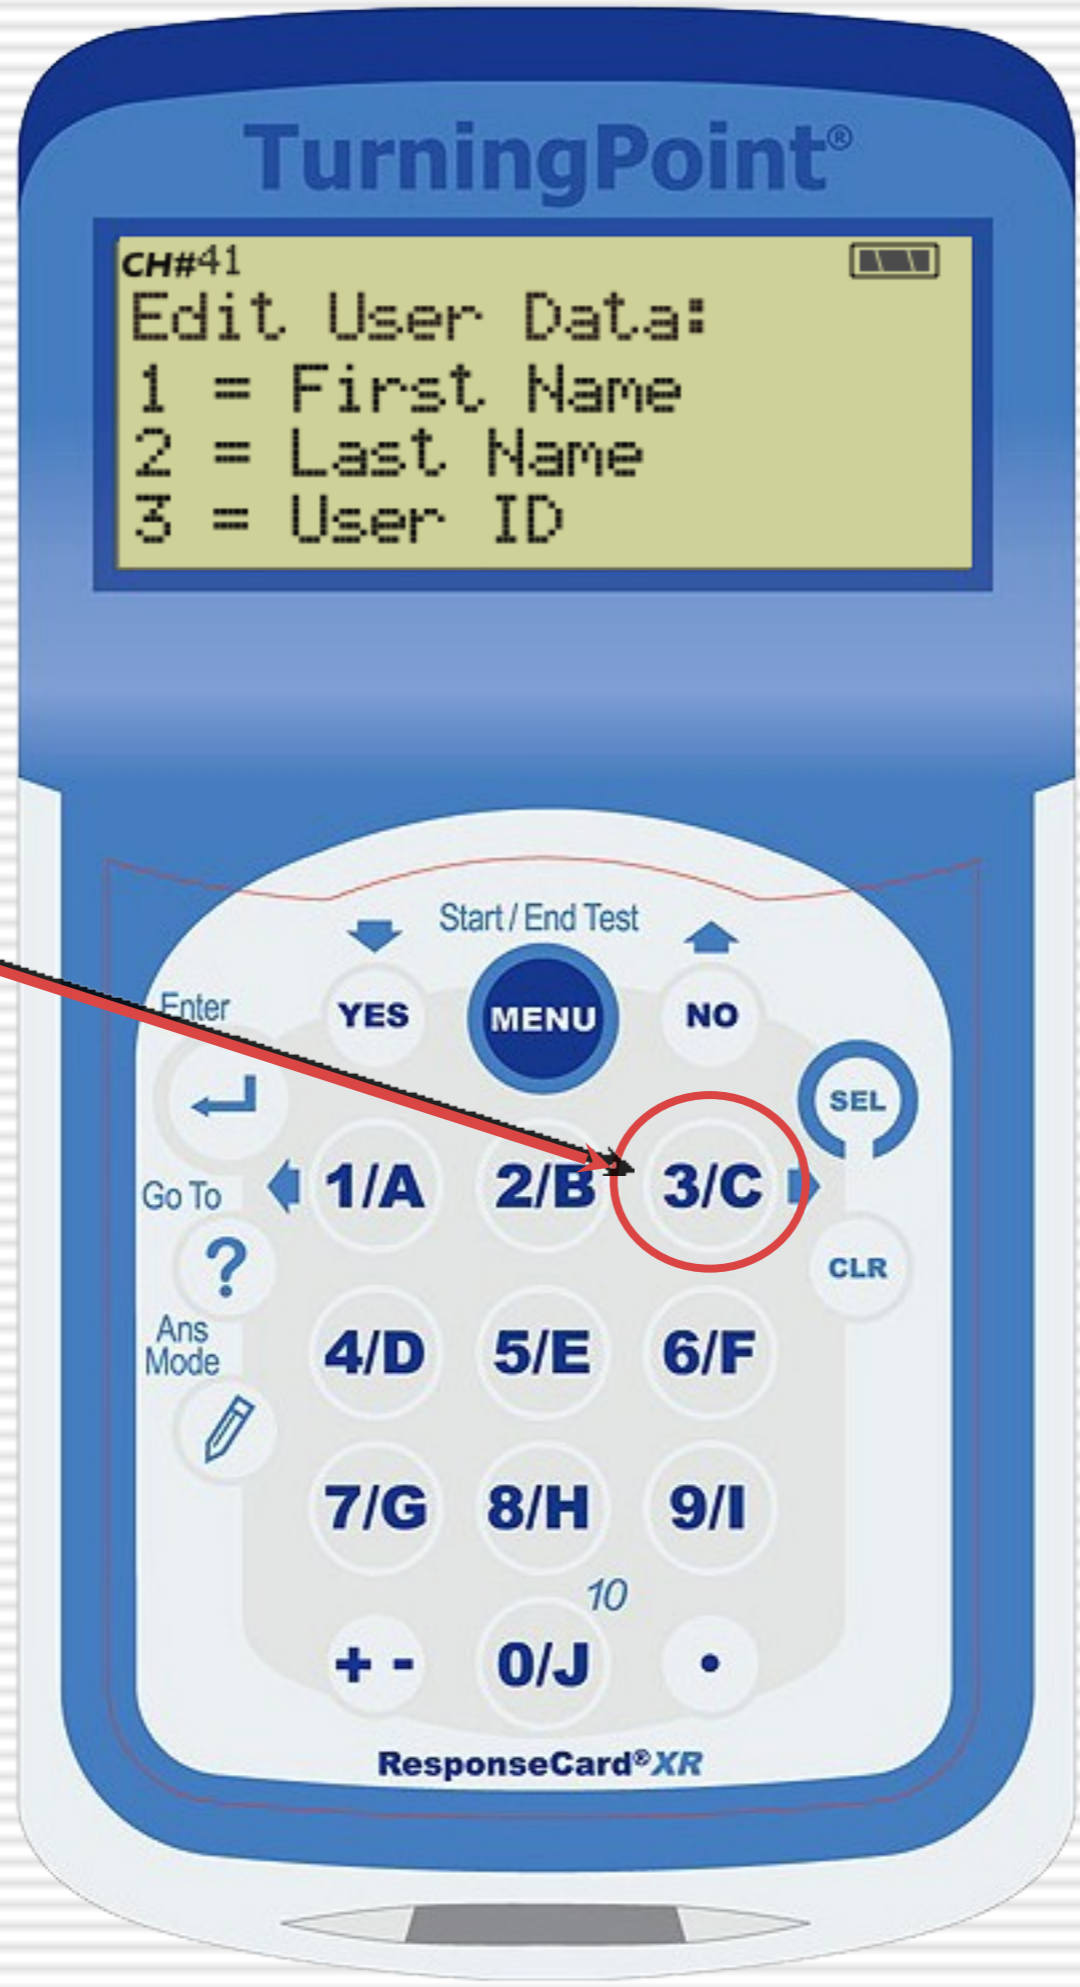

If requested by your instructor, Press 3 to enter your User ID


Back to User Data

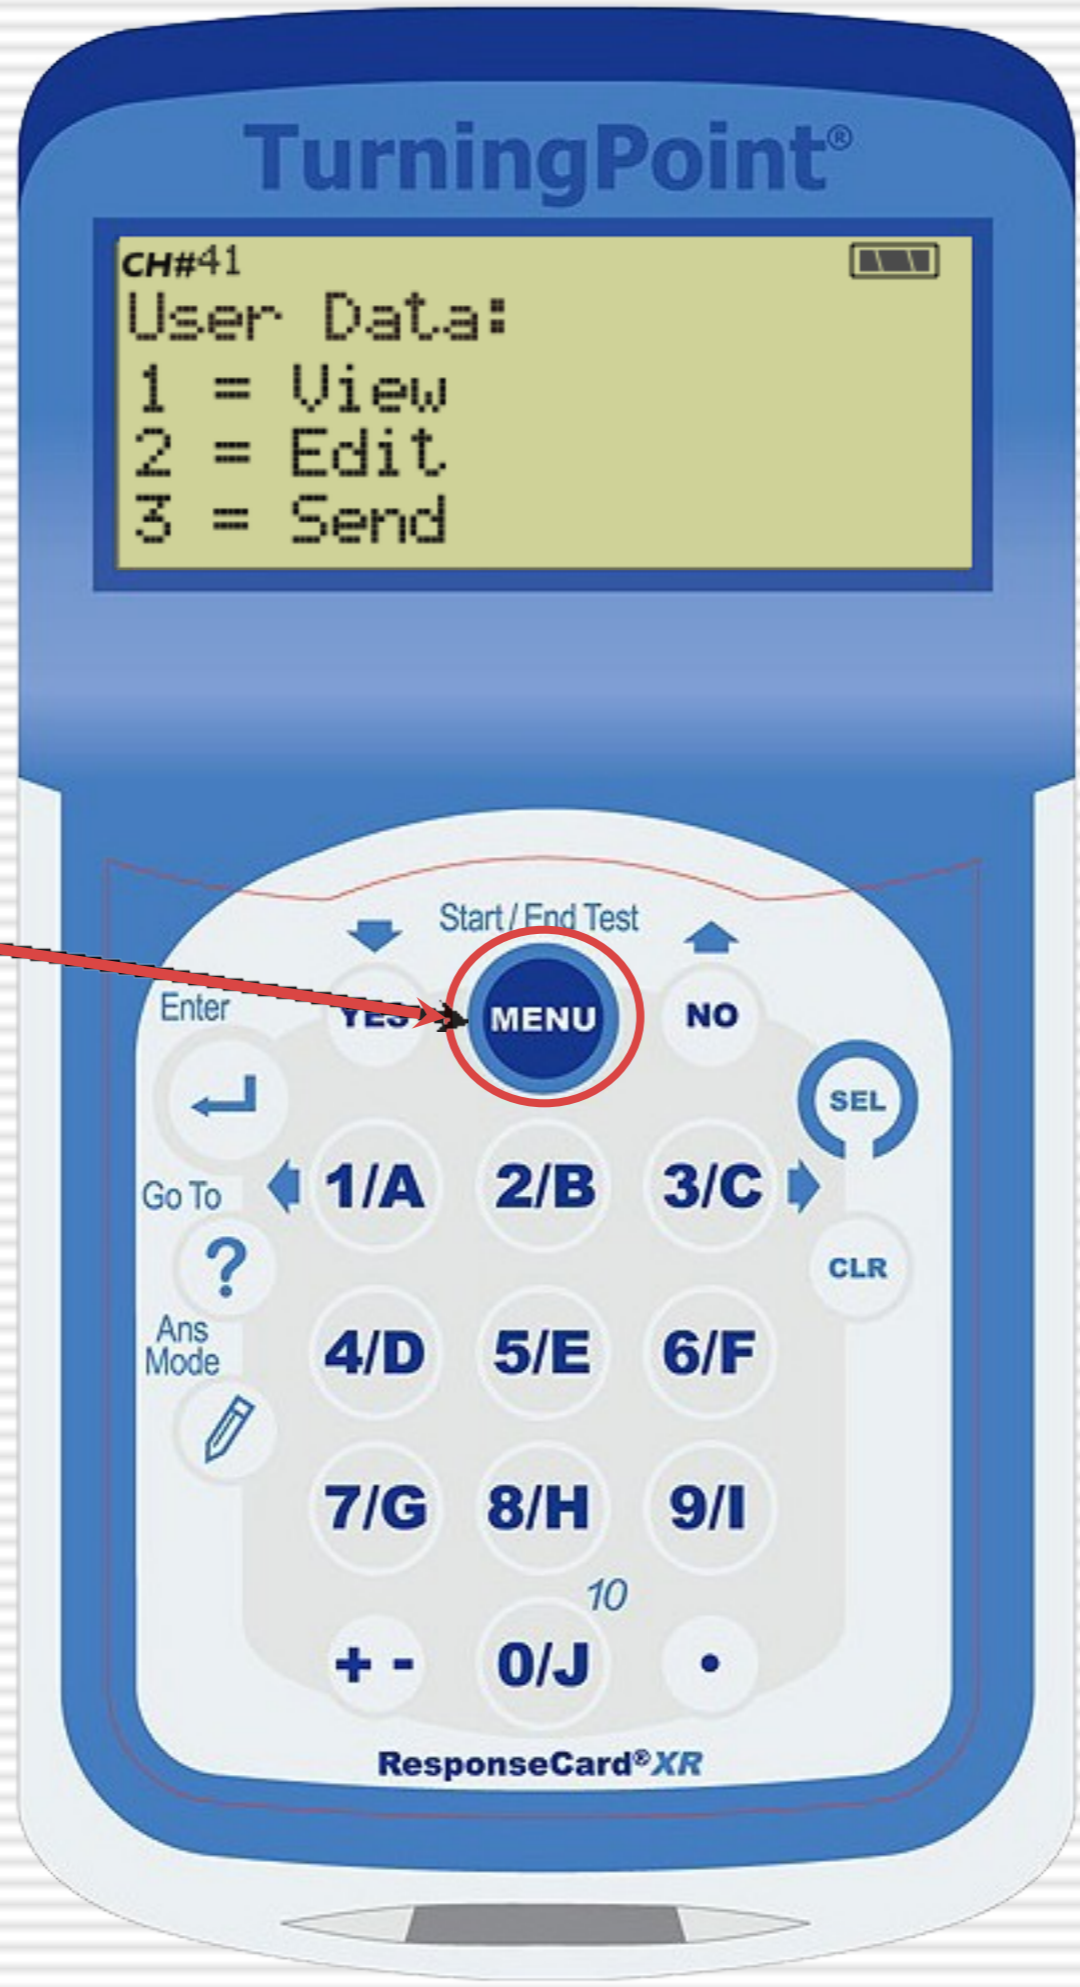

Press MENU to move back up the list of menus - in this screen, you can view the data you just entered by pressing one - otherwise press MENU again

Select other Options

Use the arrow keys to select the other options

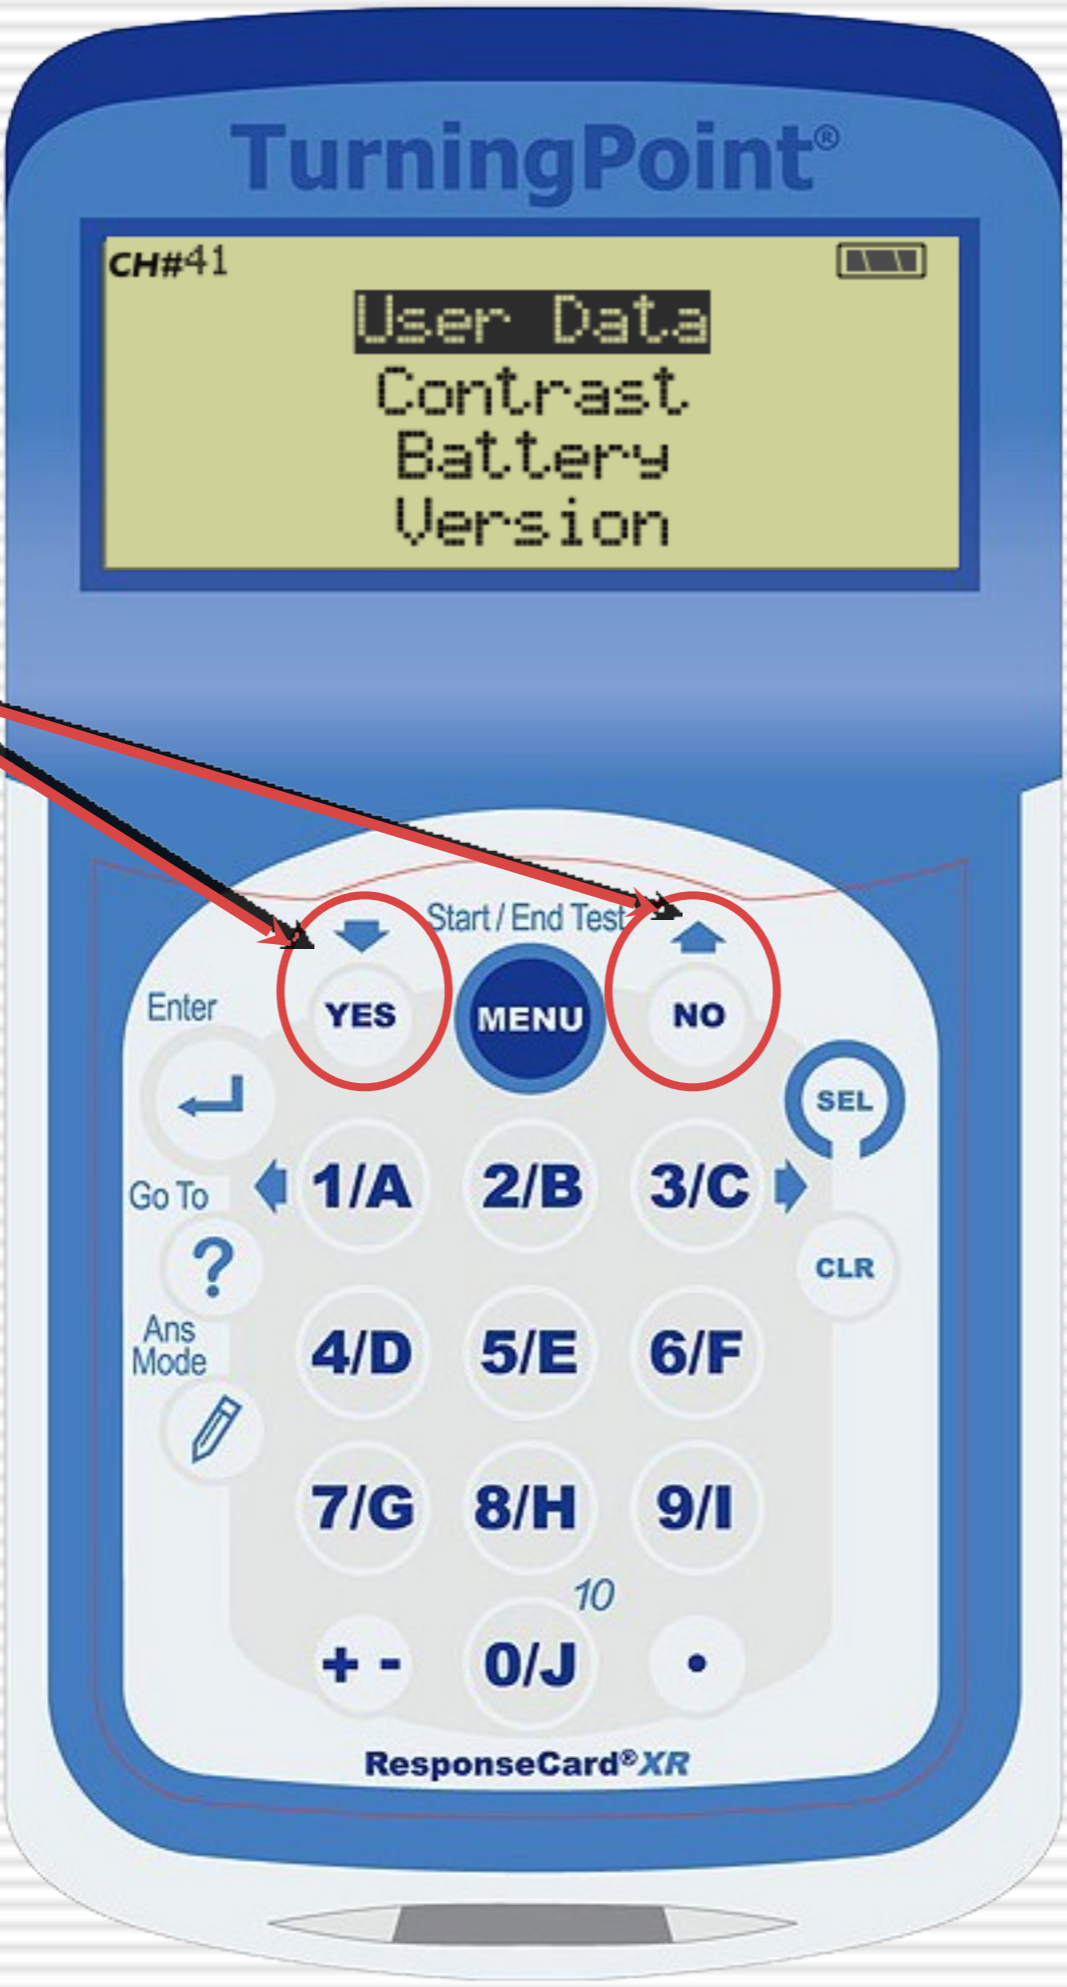


Other Setup Options


Once you have selected an option, press the Enter key

Contrast will allow you change the screen contrast
Battery will show the percentage of battery time left

Version shows the clicker's software version number

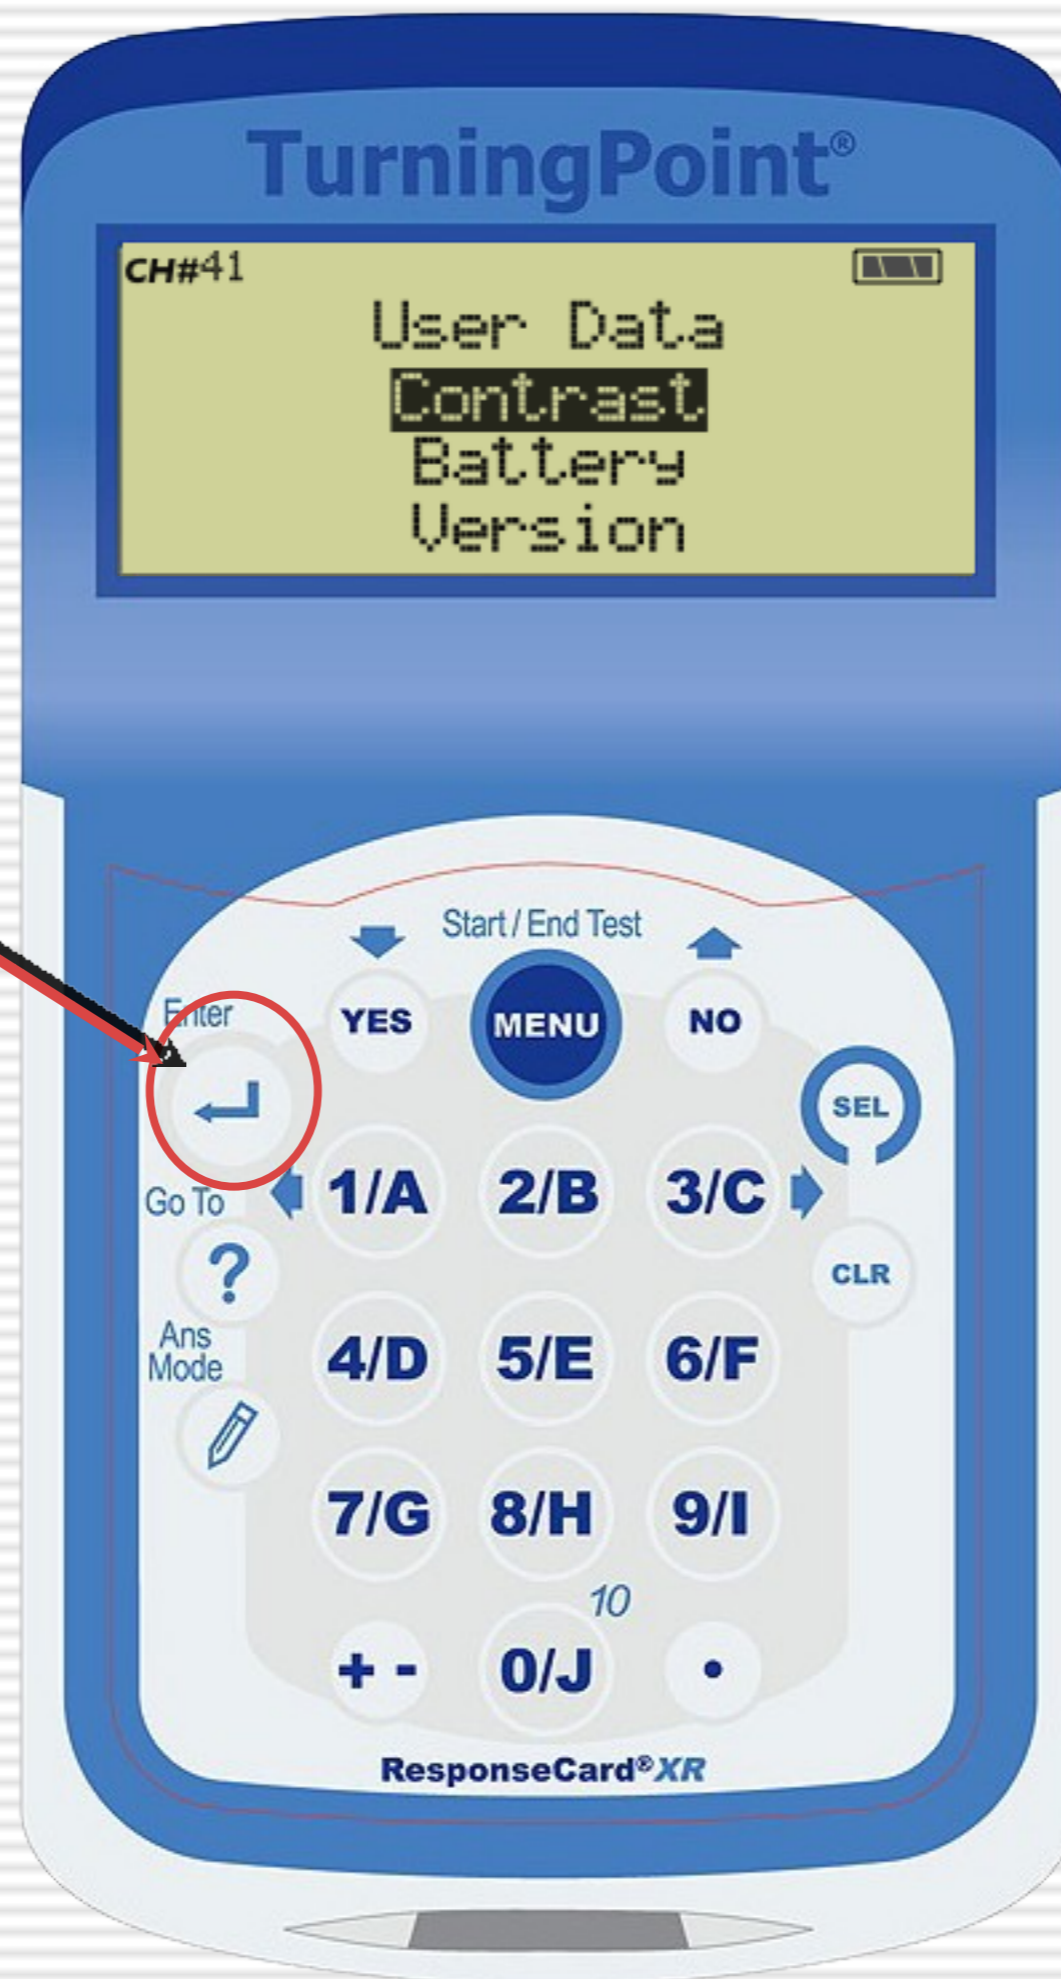

Setup Complete

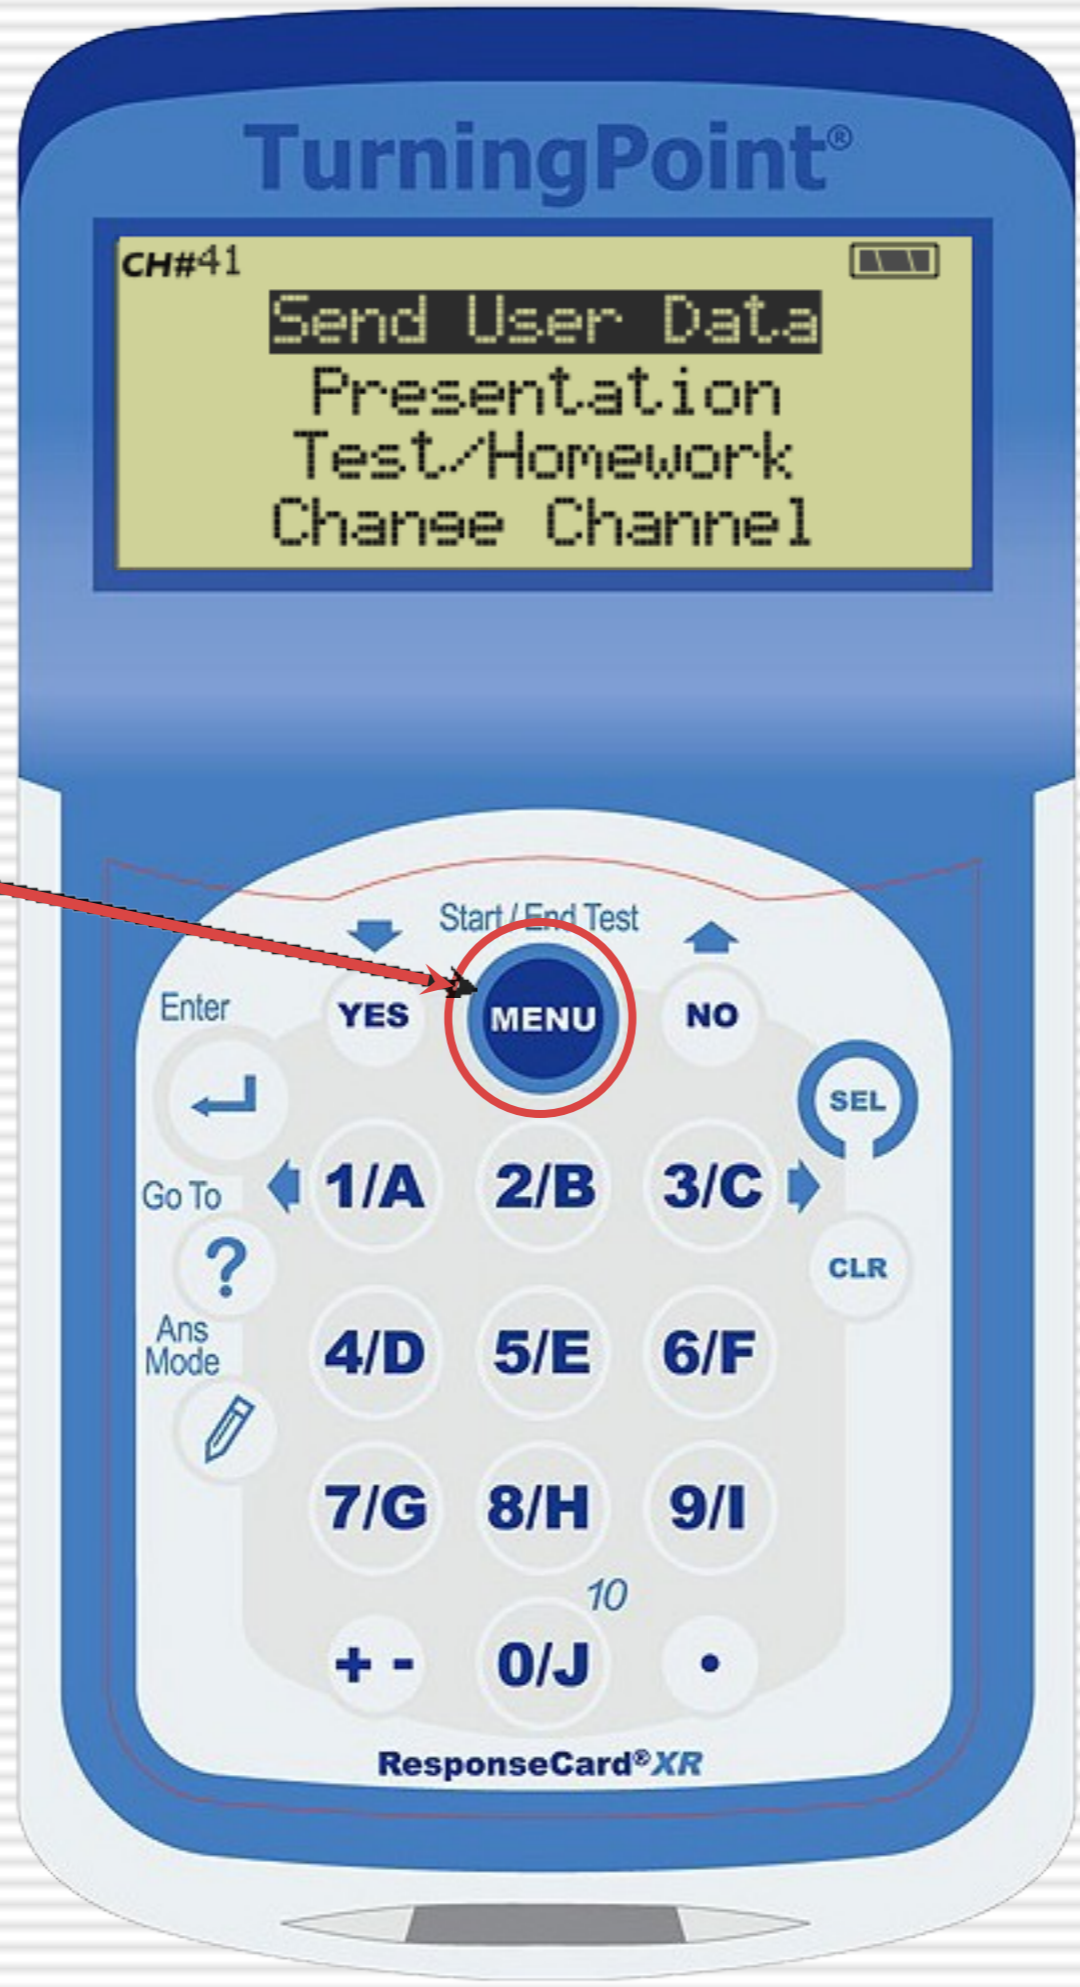

Press MENU until you return to the top level screen

Set up is complete